


eDrum*in*

USER MANUAL

eDRUM*in*

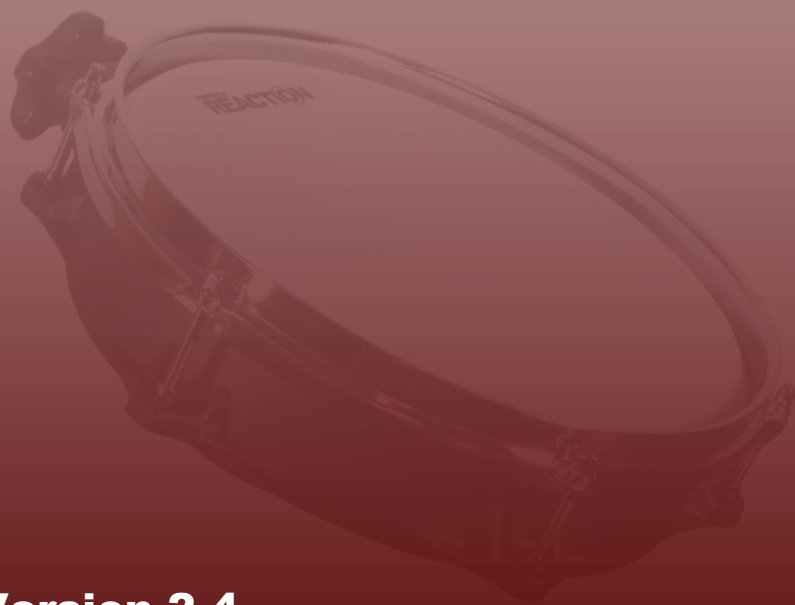

Version 2.4

Table of Contents

Introduction.....	4
Features at a Glance.....	4
The Hardware and Connections.....	5
Supported Pads and Pedals.....	7
Getting Started.....	8
Attaching the Drum Stand Clip.....	8
Installing the Control Application.....	9
Enabling eDRUMin in your MIDI Applications.....	9
Connecting Drum Pads.....	10
Loading a Pad Preset.....	10
Drum Maps and Kit Pieces.....	11
Setting up a Hihat Controller.....	12
The Control Application.....	13
The Input Selector.....	13
Sidebar.....	14
Trigger Editor.....	14
Pad / Input Type Settings.....	15
Calibrating Pads.....	16
Transient Scanning Controls.....	17
Crosstalk Cancellation.....	18
Articulation Scalers.....	18
Sense Controls.....	19
Rimshot Range.....	19
Edge Sense.....	19
Bell Sense.....	20
Positional Sensing.....	21
Hotspot Suppression.....	23
Output Settings.....	24
Note Panel.....	24
Velocity Curves.....	25
Advanced Mode.....	26
Note Banks.....	26
Velocity Gates.....	27
Independent Velocity Curves.....	27
Sending Control Change Messages.....	28
Record Assist.....	29
Using a Roland BT-1.....	30
Preset Manager.....	31

Working with User Presets.....	33
Creating User Presets.....	33
Importing Presets.....	33
Device Snapshots on USB Flash.....	34
Drum Map Editor.....	35
Pedal Editor.....	37
Hihat Controllers and Expression Pedals.....	38
Calibrating Your Pedal.....	38
Modes for Expression Pedals and Hihat Controllers.....	38
CC Mode vs. Levels Mode.....	39
Adjusting the Responsiveness of Closed Hihat Notes and Splashes.....	40
Velocity Curve.....	41
Advanced Hihat Options.....	41
Setting up VH-12 and Hall Effect Sensors.....	42
Sustain Pedals and Footswitches.....	43
Modes and Sub-Modes for Sustain Pedals and Footswitches.....	43
Using a Pedal for Bank Changes.....	44
Flash Device Snapshot Change.....	45
Settings Panel.....	46
Application Settings.....	46
Device Settings.....	47
MIDI Monitor.....	48
eDRUMin USB Host Port and MIDI Ports.....	49
The Flow of MIDI Messages.....	49
Processing External MIDI.....	50
Updating Firmware.....	51
iOS Control Application.....	52
Getting Connected.....	52
Network MIDI.....	52
About Power in iOS.....	53
Appendix.....	54
Working With Multiple Devices on Separate USB Ports.....	54
Controlling Banks with MIDI Program Change Messages.....	55
Setting up your Hihat on its Stand.....	56
Tips For Working with Audiofront Controls.....	57
Troubleshooting.....	58
Drum Pad Wiring Diagrams.....	59
Pedal Input Wiring Diagrams.....	60
MIDI Implementation.....	61

Introduction

Features at a Glance

eDRUMin devices are e-drum to MIDI interfaces with universal trigger inputs supporting pads, cymbals, and acoustic triggers. Flexible trigger circuitry that allows them to support both piezo / piezo pads and piezo / switch pads. 10 bit sampling at up to 10K samples / per second / input ensures high resolution triggering with extremely low internal latency and jitter.



Supports Roland and Yamaha 3-way triggering



Roland Bell Sense for 3-Way triggering using a single input



Hotspot suppression for mesh pads.



Full Size MIDI ports for interfacing 3rd party gear *



Positional Sensing for cymbals and mesh pads with center mounted piezo.



Hihat input supporting Yamaha and Roland style controllers



Bezier Velocity Curves



USB Host port for expansion **



Ultra compact and portable design




Powerful and intelligent UI for easy setup

* eDRUMin 4 and eDRUMin 8 only have a MIDI Out port while the eDRUMin 10 and 12 have both MIDI In and Out.

** USB Host port is NOT available on the eDRUMin 4.

The Hardware and Connections


4

4 Universal Trigger Inputs

9V DC Connector (if not using USB)


Controller Input

Full Size USB B

Status Indicator

MIDI Indicator

Full Size MIDI OUT


8

8 Universal Trigger Inputs

Full Size USB B


Pedal Input

USB 2.0 Host Port Supports up to 4 eDRUMin / USB MIDI

Status Indicator

MIDI Indicator

Full Size MIDI OUT


10

10 Universal Trigger Inputs

Power Switch / LED

External 9V Power (if not using USB)

Full Size MIDI ports


Dual Controller Inputs

USB 2.0 Host Port Supports up to 4 eDRUMin / USB MIDI

Status LED

MIDI Port Activity LEDs

USB Type B Connector


12

12 Universal Trigger Inputs

Full Size MIDI ports

USB Type B Connector

External 9V Power (if not using USB)

MIDI Activity LEDs

Status LED

Dual Controller Inputs

USB 2.0 Host Port Supports up to 4 eDRUMin / USB MIDI

Power Switch / LED

Pedal Input

 


The pedal inputs on the back of the eDRUMin devices do not support drum pads. Pedal inputs uses DC current which can damage the drum pads. See below for more information about the type of pedals you can connect.

DC Power Connector

eDRUMin devices typically draw power from the USB cable connected to a computer. If you want to use your eDRUMin without connecting it to a computer, you can power it with a USB charger or the DC Power Jack if it has one.

eDRUMin devices use a BOSS style jack, where the center pin must be negative. The eDRUMin 4 needs at least 100mA, and the eDRUMin 10 and 12 need at least 200mA, or 600mA if also using the USB host port.



The eDRUMin 12 has improved DC input circuitry allowing it to use power adapters with center negative or center positive polarities.

Regardless of which device you have, the BOSS PSA-120S is great choice. Again the eDRUMin 8 does not have a DC connector, but it can still be powered using a USB charger.

USB Host Port

Except for the eDRUMin 4, all other eDRUMin devices have USB host ports. This USB A 2.0 port can be used to daisy-chain two devices together or to connect 3rd party USB MIDI devices (another drum module for example). Alternatively, using a 4 port USB hub, you can connect up 4 additional eDRUMin devices or USB MIDI devices.

If using a USB hub, it's recommended to use an unpowered hub. The USB host port can supply up 500 mA of power, which should be enough for most setups. Only use a powered USB hub if your setup requires more than 500 mA of power.

Look [here](#) for more information about using the host port.

Full Size MIDI Din Ports

All eDRUMin devices have full size 5 pin MIDI Din Out ports. They operate at 3.3V and should be able to supply enough power for 3rd party accessories designed to be powered by 3.3V over a MIDI cable.

The eDRUMin 10 and 12 also have optically isolated full size MIDI Din In ports which can be used for connecting 3rd party MIDI gear.

Supported Pads and Pedals

eDRUMin supports all kinds of e-drum pads, cymbals, triggers, and pedals. It doesn't matter if your pads are made by Roland, Yamaha, Alesis or anyone else; they are well supported. Here's a list of the gear used during development.

Pads and Cymbals, and Triggers

Electric Drum Pads

Roland PDX-125k
Roland PDA-120LS
Roland PD-8
Roland KD-8
Roland KT-10
Roland HD-1 Toms
Roland BT-1
Yamaha TP-65s
Yamaha TP-120SD
DDT MS-140C
ATV AD-S13

Electric Cymbals

Roland CY-12C
Roland CY-13R
Roland CY-15R
Roland CY-8
Roland VH-10 Hihat
Roland VH-13 Hihat
Yamaha PCY155
Lemon 18" Ride

Acoustic Triggers

Roland RT-30HR

Note: Center mounted mesh trigger systems that use cylinders instead of cones (Jobeky for example) tend to produce signals that are too hot for the eDRUMin inputs. Visit the eDRUMin forums for [more information](#).

Hihat Controllers

The pedal input on the back of the device supports both Roland and Yamaha style hihat controllers, expression pedals, sustain pedals, footswitches, and rotary encoders. Look in the [Appendix](#) for wiring diagrams for supported pedal types.

Note: When setup as an expression pedal, the pedal input can supply 3.3V to power most 3.3V compatible Hall effect sensors.

Typically this input is used for a hihat controller, but it can also be used to change banks of notes, send control change messages and more.

Always connect the cable to your pedal before connecting to the eDRUMin. Look [here](#) to see what the various types of pedals can do. Here's a list of the pedals I used during development.

Hihat Controllers

Yamaha HH65
Roland FD-8
Roland VH-10
Roland VH-13

Expression Pedals

Moog EP-3
Roland EV-5
Yamaha FC7
M-Audio EX-P
Behringer FCV100
Line6 EX 1

Sustain Pedals

Yamaha FC3A
Yamaha FC4
Yamaha FC5A
Roland DP-10

Footswitches


Yamaha FC5
Boss FS-7
Marshall 90010

Getting Started

Attaching the Drum Stand Clip

You can use the included drum stand clip to attach your eDRUMin to the frame of a drum stand or a hihat stand.

Below are instructions for attaching the clip of the eDRUMin 4, but the process is the same for all eDRUMin devices. Make sure your clip is very tight to ensure there's enough friction to prevent slipping.

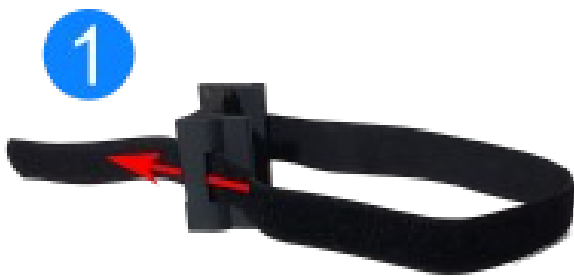

Insert the strap through the slot to make a loop.



Place the eDRUMin inside the loop. With the device centered on the clip, pull the strap tight.



Place the device and the clip against the frame of your drum stand. Wrap the strap around the frame and insert it through the slot.



Pull the strap very tight and wrap back around the device. Stick the Velcro to secure it in place.

Because eDRUMin devices are class compliant, there's no need to install drivers. You will however want to install the Control Application to edit the device settings.

Installing the Control Application

The Control application is available for Windows, macOS, Linux, and iOS and can be downloaded from the Audiofront [downloads](#) page.



The [Control Application](#) is discussed in detail in the next section of the manual.




Enabling eDRUMin in your MIDI Applications

When you use your eDRUMin for the first time with a new application, you might need to enable it for input in the application's audio / MIDI setup. Here are some screenshots showing how to enable eDRUMin in various applications.


REAPER

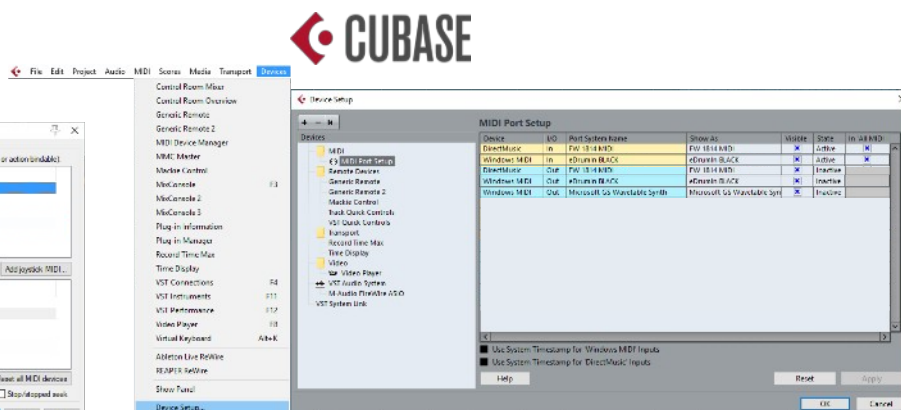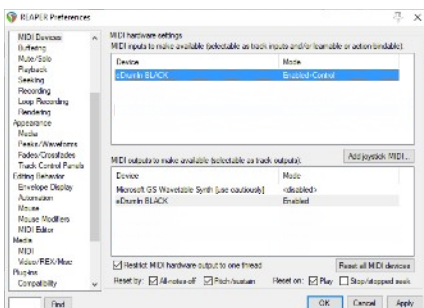

BFD3

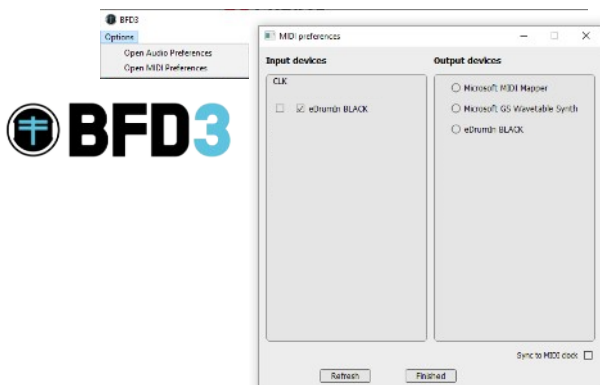

Ableton

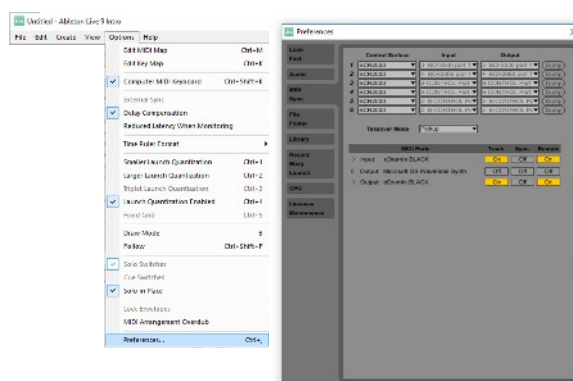


Connecting Drum Pads

The 1/4" inputs on the front of the device are for connecting drum pads. Its recommended to connect your pads with TRS connectors. While using a TS cable for a single zone pad will work, you can prevent a lot of confusion by keeping TS out of your setup.




Dual Input Cymbals

 Some ride cymbals have two TRS connectors. If you plan to use both connections for 3-way triggering, connect them as shown in the image below. Next, set the pad type of the BOW / EDGE input to 'Roland 3-Zone Ride' and the second input will be marked 'Bell'.



 For **ED8 / 10 / 12**, the BOW / EDGE connector should be plugged into the top input and the BOW / BELL on the bottom.



For **ED4**, the BOW / EDGE connector should be on left, and the BOW / BELL should be on the right.

Using Input Splitters

Connect the pads using a standard splitter cable and set the input type to Dual Mono. Once split, each half input will have its own trigger settings.



Loading a Pad Preset

You can load presets for your pads by clicking on the Preset Manager Icon.



- 1 Open the Preset Manager
- 2 Select an input
- 3 Double-click a preset to load it

Filter presets by brand

Filter presets by type

Brand Filters		Type Filters	
Roland	18	Drum	9
Alesis	0	Cymbal	8
ATV	0	Hihat	2
Yamaha	3	Kick	2
DDT	1	Other	2
Other	1	Trigger	0

Preset Name	Title	Description	Author	Brand	Type	Date	Device
Roland PD-125	Roland PD-125	12" dual zone mesh pad with positional sensing	Robert Jonkman	Roland	Drum	May 16 2020	ED10R2
Roland HD-1 Tom Pad							
Roland CY-8							
Roland VH-10							
Roland CY-15R							
Roland CY-13R							
Yamaha PCY-150s							
Yamaha TP65S							
DDT-MS140C							
Roland KD-8							
Roland KT-10							
Yamaha TP-120SD							
Roland VH-13							

If a preset for your pad is not available, you'll need to set it up manually by [setting the pad type](#) and [adjusting its trigger settings](#).

Look [here](#) for more information about using the Preset Manager.

Drum Maps and Kit Pieces

eDRUMin uses the idea of drum maps and kit pieces. The device contains a drum map and inputs are assigned to kit pieces. The device determines which notes a particular input should trigger by looking them up from the drum map.

This system allows the user to trigger different hardware / software by simply changing drum maps, and also provides visual feedback about what sounds each pad triggers.

Click on Kit Piece selector, shown right, to reveal and select a kit piece.


Click to select Kit Piece



Changing Drums Maps

eDRUMin comes with several factory drum maps. You can access them by clicking on the drum map indicator.

Double click a factory drum map to send it to your device.

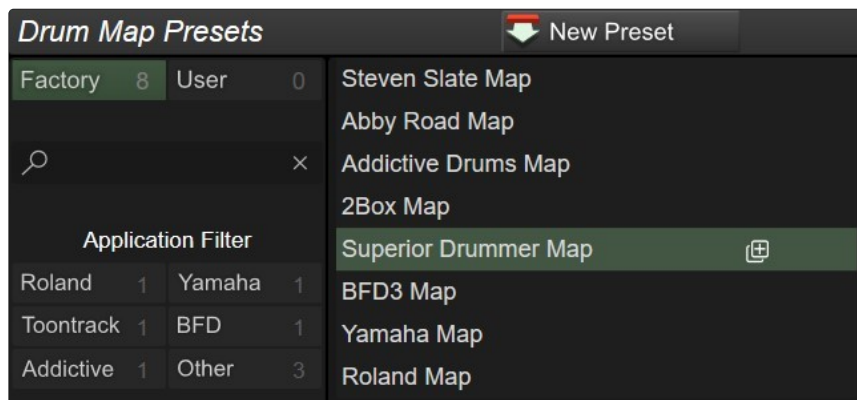

Click to change drum maps.



Users can create their own drum maps and edit them for their own needs.

Look [here](#) for more information about the Drum Map Editor.


Custom Note Assignments

If you do not want to use predefined note assignments from a drum map, you can set your pad to output Custom Notes.

When you switch to 'Custom Notes', you can change note assignments by dragging up and down, using the arrows, or double clicking and entering either a note or note number.



Note controls become editable.

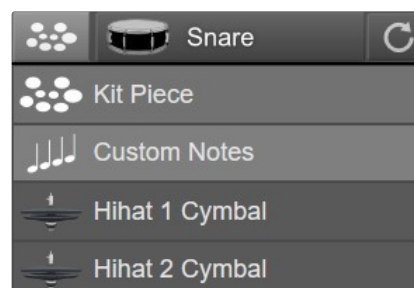

Set output to 'Custom Notes'

Setting up a Hihat Controller

Like connecting pads, make sure you connect your hihat controller using a TRS cable. Connect the cable to your hihat controller before plugging it into one of the pedal inputs on the back of the unit.

By default, the eDRUMin pedal inputs are configured for Roland style hihat controllers. If your pedal isn't working properly after you connect it, you can set it up manually or load a pedal preset if one is available.

Calibrating

Typically the only thing you need to do to get your hihat working properly is to calibrate its voltage range.

You can do that by going into the pedal editing and clicking on the calibrate button.

Click to calibrate hihat pedal



Simply press all the way down on your hihat pedal and then slowly take your foot off it to calibrate its range.

You can make fine adjusts to the calibration using your mouse. In particular, it's a good idea to make sure when you release your foot off the pedal that the red indicator is outside of the green calibration rectangle. This will ensure the device doesn't transmit control change messages when you are pressing on the pedal.


After you are done making adjustments, click on the calibrate button again to lock in the new calibration settings.

Look [here](#) for information about setting up your hihat controller.

Setting up your hihat Cymbal

To function optimally, especially if using Hihat Levels mode, the input you use for your hihat cymbal needs to be set to 'Hihat Cymbal'.

If you are using an eDRUMin 10 or 12, you will see 'Hihat 1 Cymbal' and 'Hihat 2 Cymbal' because they have two pedal inputs.

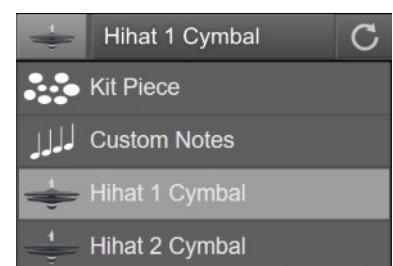

Hihat Cymbal Input



Hihat Pedal Input

Once setup properly, the icon for your hihat cymbal input will display an electric hihat icon, and when the pedal input for you hihat controller is selected, both inputs will be outlined in orange.

The Control Application

As your *eDRUMin* has no buttons or controls, you'll need to use the software control application to edit settings on the device.



The Control Application doesn't need to be running for the device to work. All the processing and settings are saved on the device itself. By default, any changes you make with the Control Application are saved automatically 5 seconds after the last edit. Make sure you wait a few moments after making a change before unplugging the device.

The Control Application can be resized as you see fit. Just grab one of the corners and drag it to the size you want. The size and position are saved and restored the next time you open the application. Also, you can easily move the application around by clicking and dragging on any empty space in the background of the application or controls.

The Input Selector

The topmost part of the *eDRUMin* control application is reserved for selecting the device and input you want to edit.




An input can be selected for editing by clicking on its graphic. Assuming the Auto-Select control is on, you can simply hit a pad and it will be automatically selected and ready for editing.

If you have more than one device connected, icons for each device become visible on the right hand side, allowing you to select which device you want to edit.

Sidebar

The Sidebar gives quick access to pages of controls as well as a few useful settings.

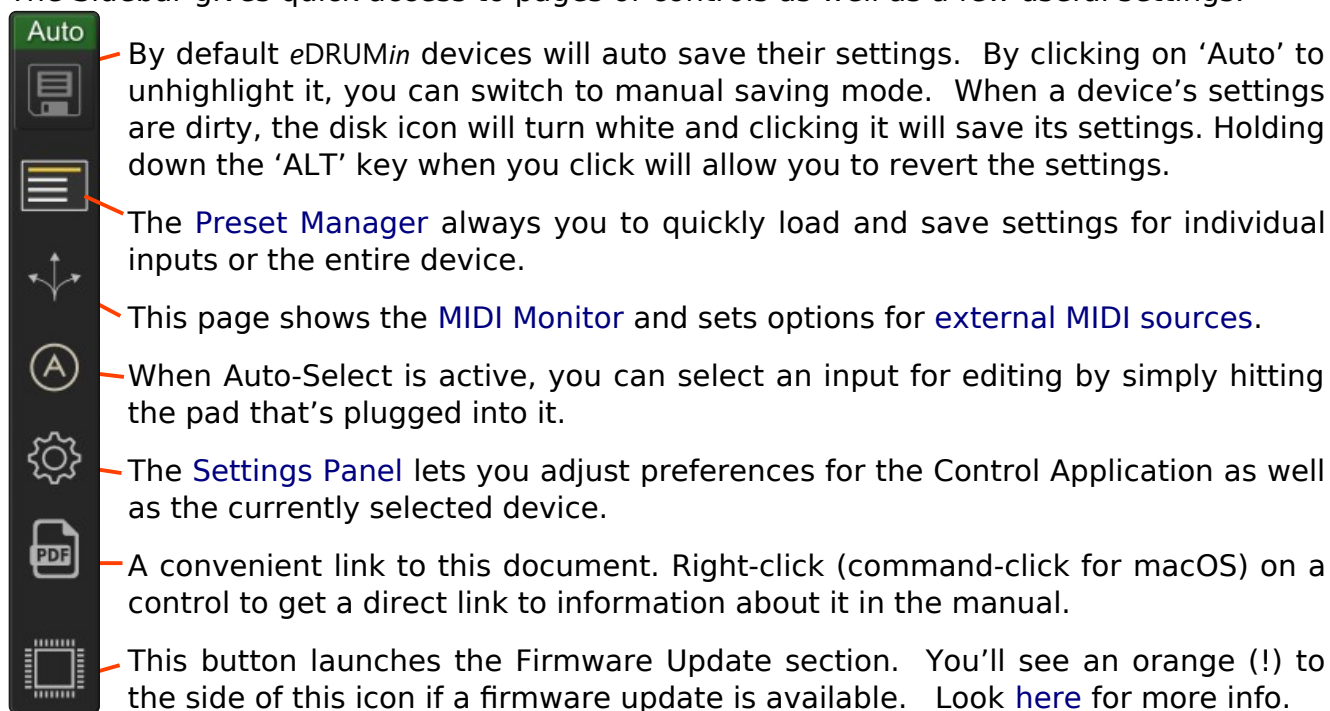


Trigger Editor

The Trigger Editor is divided into functional groups for configuring the type of pad, adjusting basic scan settings, processing sense data, and controlling the MIDI output. The sections are outlined in the image below.


Pad / Input Type Settings

Transient Scanning Controls

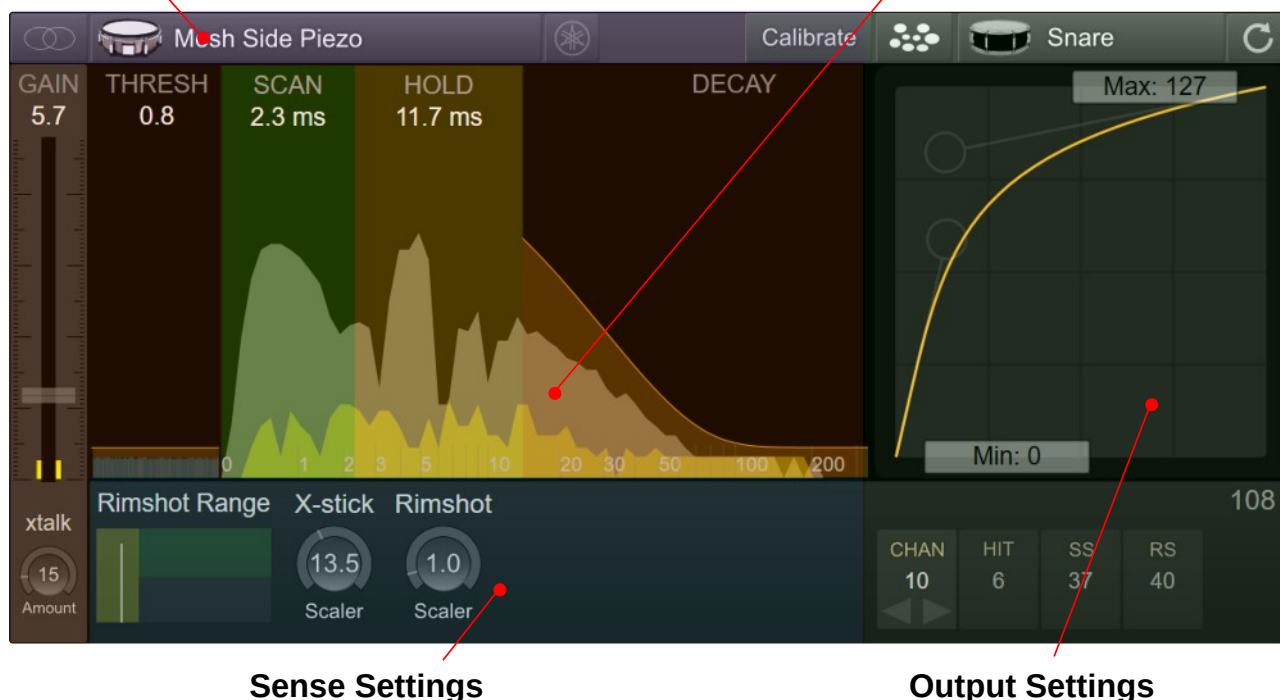

Pad / Input Type Settings

Whenever you connect a new pad to the device, these are the settings you should adjust first.

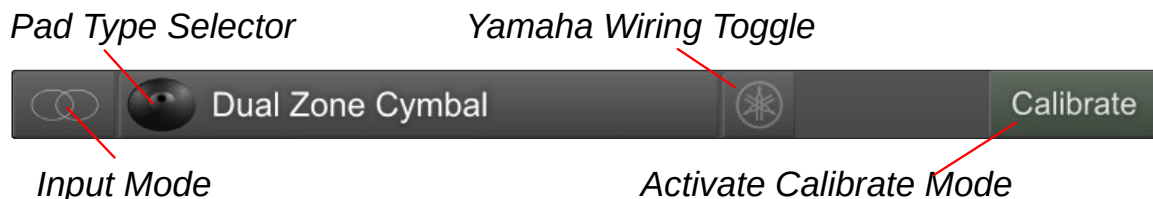

Input Mode

Each input can function as a stereo input (for dual / triple zone pads), mono (single zone pads), and dual mono (two single zone pads connected to a single TRS cable).

Pad Type Selector

The pad type selector determines how the input will be wired electronically, and which controls are available to edit.

When you press the Pad Type Selector, the following panel appears and you can select the type that best matches your pad.

Click to select Pad Type



Because of the diversity of metal cymbal configurations, an extra setting is needed. 3-Zone metal cymbals support a bell that uses a piezo or a switch, and dual zone metal cymbals support Piezo / Switch or Piezo / Piezo configurations.

3-Zone Metal helper cymbal configuration

Bell is Piezo

Dual zone metal cymbal configuration

Piezo / Piezo

Note: If an input is set to a piezo / switch pad, but you connect a piezo / piezo pad, the wiring of the input can put strain on the ring piezo. To protect your pads, eDRUMin will test inputs and indicate a [compatibility issue\(!\)](#) if there's a problem. It's recommended to always unplug the TRS cable from the eDRUMin when changing pads.

Take a look in the appendix for [wiring diagrams](#).

Yamaha Wiring Toggle

eDRUMin devices support both Roland and Yamaha style wiring. Some of the [Sensing Controls](#) need to know how the pad is wired in order to work properly. If, for example, the Hotspot Suppression is not working well for you, it could be that you need to toggle this switch. Look at the [Wiring Diagrams](#) in the appendix for more information about how pads should be wired.


Calibrate Pad or Cymbal

Calibrating allows you to set basic scan settings for your pad by simply hitting it with your drum sticks. Look on the following page for more information.

Calibrating Pads

The calibration feature is designed to allow you to quickly setup a pad without needing to fiddle around with controls. You simply enable the Calibrate button, hit your pad to calibrate it, and turn it off again when you are done.

Before using the calibrate feature, make sure that you have already selected the appropriate pad type.

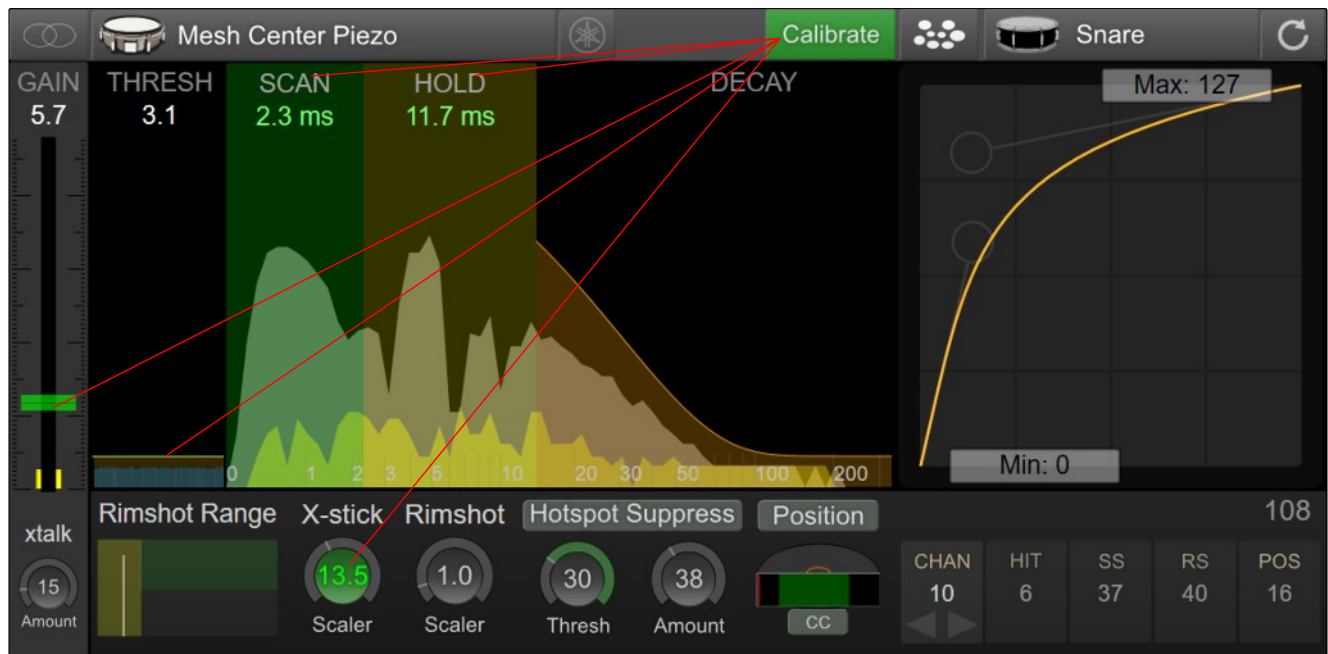

When you first activate the Calibrate feature, the GAIN, THRESH, SCAN, HOLD, and the articulation scaler controls will be highlighted in green. As you hit the different parts of your pad, the controls are adjusted automatically to provide enough headroom. The harder you hit, the more headroom is provided. You can override the automatic calibration of any control by moving it with your mouse. The control will lose its green highlighting and will no longer be automatically adjusted.

When you are happy with the results, turn the Calibrate feature off to save the settings.

Calibrating a Dual Piezo Pad / Trigger

Start by hitting the pad off-center to calibrate the gain control. Avoid hitting directly over the sensor of the pad, as this can drag down the gain control too quickly.

Next, hit the head of the pad near the edge. This will help get a good calibration for the HOLD control.


Lastly, hit the rim of the pad to calibrate the XS (crosstick) scaler.

Calibrating Cymbals

Begin by hitting the bow to calibrate the gain of the pad. Next hit the edge and the bell to calibrate their respective scaler controls.

Transient Scanning Controls

eDRUMin provides a very clear graphical representation of the transients from your pads which makes adjusting controls intuitive and easy.

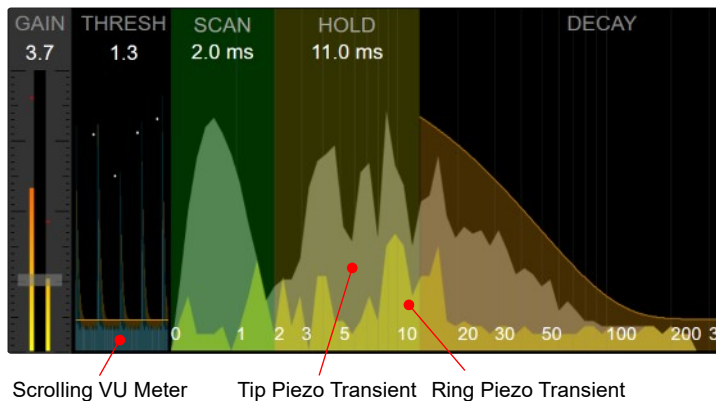

The amplitudes and time scales in the UI are not linear. The amplitudes are scaled so that there is more detail and resolution at low amplitudes, making it easier to properly set the Thresh control. Similarly, the time scale is also scaled to give more detail and resolution at the very start of the transient, making it easier to accurately set the Scan control.

Gain

The gain control acts as a master gain for the input. Adjusting it affects the velocities of all articulations. To adjust the velocities of individual articulations, use the [Articulation Scalers](#). For more control of dual peizo pads, the gain slider can be unlinked allowing you to adjust the gain to the head and rim sensor separately.

Input Gain



Unlink Gain

Thresh

This is the minimum amplitude required to start scanning a transient. Make sure you set it a bit above the noise floor or you will get false triggers, especially when the Control Application is running.

Scan

Dragging anywhere on the green scan area will allow you to change the SCAN time. You want to keep the SCAN time as short as possible, while ensuring that it covers the major peaks at the beginning of a transient. Scan time adds to the overall latency of the generated MIDI notes, so a compromise between velocity accuracy and note latency has to be made.

Note: The [Hotspot Suppression](#) and Positional Sensing features need at least 2.3 ms of scan time to function properly. If the scan time is less than 2.3 ms, they will be disabled.

Hold

Often a high peek arrives late in a transient. In the graphic above, you'll see that the highest peek actually comes at about 9 ms. Any late peaks need to be covered by the HOLD control or they will cause a second hit to be registered. Keep in mind that long hold times limit the device's ability to trigger accurately during drum rolls and buzz rolls, so don't set it any longer than it needs to be.

Decay

The last of the transient scan controls is the DECAY control. You need to adjust it to loosely follow the natural decay of your transients. If you are too aggressive (try to follow the natural decay too closely), you could end up with double hits. At the same time, if you leave this control too relaxed, the device's ability to track fast drum rolls will be compromised.

Crosstalk Cancellation




Sometimes vibrations from hitting one pad can travel through a drum stand and into an adjacent pad, registering a hit even though it hasn't actually been hit. This is called crosstalk. The CROSSTALK control is designed to prevent those vibrations from triggering notes.



To better see the effect of this control, turn Auto Select off, and watch in the Scrolling View as you hit adjacent pads. The amount of crosstalk cancellation is shown in red. Adjust the CROSSTALK control until the red covers the blue vibrations.

vibrations from hitting adjacent pad

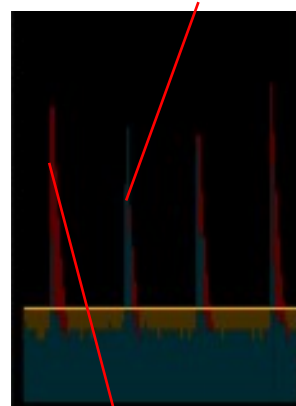


Crosstalk cancellation applied

MIDI coming into the device from the USB port is also used in the calculation of crosstalk. If for example you are using 2 eDRUMin devices, you can use a DAW environment to route the output of one device into the other and vice versa. This will help prevent crosstalk between the two devices.

eDRUMin 8, 10, and 12 devices also apply crosstalk cancellation to MIDI coming in from device connected to the USB host port and MIDI in DIN. Look [here](#) for more information about the flow of MIDI between connected devices.


Articulation Scalers

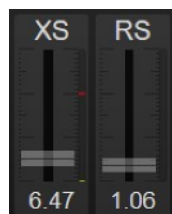

The velocities for all the articulations of a pad or cymbal are derived from the main piezo signal. For the dual piezo pads, that's the sensor for the head of the pad.

You adjust the gain of that signal using the gain slider described on the previous page.

However, to calculate the velocity of the other articulations, the eDRUMin uses the gain of the head sensor and multiplies that by respective articulation scaler.

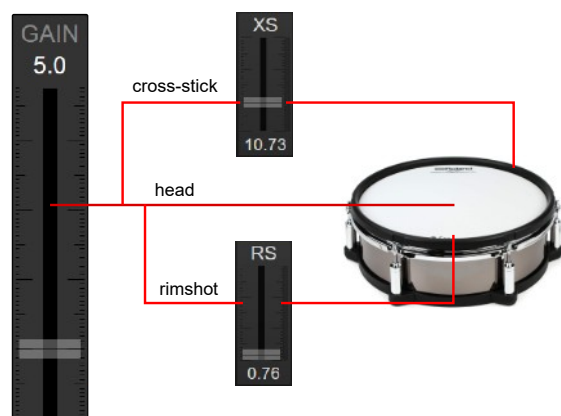

So a stereo dual zone pad usually has 3 articulations. The velocity of the hits on the head of the pad are controlled by the main gain slider. The velocity of the cross-stick (XS) articulation is the main gain slider multiplied by the XS scaler, and the velocity of rimshot (RS) articulations are controlled by the main gain slider multiplied by the RS scaler.


So adjusting the main gain slider will affect the velocities of all articulations. Always use the main gain slider to adjust the main articulation of the pad first before adjusting the articulation sliders.

Sense Controls

The sense controls are used for processing the signal(s) from a pad. The sense controls that are available depend on the [Input Mode](#) and [Pad Type](#) settings. Most of them are more advanced and you should make sure you have your pad triggering well before adjusting these controls.

Rimshot Range

The Rimshot Range control allows you to fine tune rimshot detection on dual piezo pads. It consists of an indicator and three color coded sections. The yellow section represents the head articulation, the green section represents the rimshot articulation, and the dark grey is for sidestick.

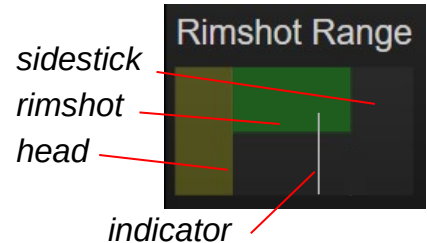


When you hit the head of your pad, the indicator will move to the left, and when you hit the rim, it will move towards the right. The section that lies under the tip of the indicator determines which articulation is triggered. In the image above, a rimshot is triggered.

Use your mouse to adjust the size of the three sections to control the cutoff between head, rimshot, and rim articulations.

Edge Sense

When the [Input Mode](#) is set to 'Mono' or 'Dual Input', Edge Sense becomes visible. This control is designed to detect a second articulation for a pad that uses a single piezo. By activating this control, an additional note control will appear in the [Note Panel](#) as well as an additional articulation scaler.

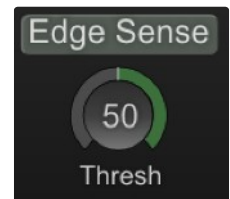

This feature will not work with all pads. When you hit the edge of your pad, check the meter in the Thresh Control. Does it increase? If it does, adjust the Thresh control so that hits on the center of the pad register below the thresh, and hits to the edge of the pad register inside the green meter.

Metal Cymbal Thresh Controls



For metal cymbal pad types there are thresh controls that allow you adjust the sensitivity of zones to prevent false triggering. As you hit your cymbal on a particular zone, the indicator on the thresh control will move. If it falls within green area of the meter, the particular zone be activated. Increase the value of the control to make the zone more difficult to trigger.

Bell Sense

Bell Sense is a feature that's designed to provide reliable and dynamic bell triggering for cymbal type pads using only a single input.

Supported Cymbals

Currently there are custom Bell Sense algorithms to support the Roland CY-12, CY-13R, CY-15R and CY-8 cymbals. More cymbals can and will be added in the future. If you have a popular cymbal that's not currently supported, contact technical support as it might be possible to add support for it.


NOTE: If you have an unsupported cymbal that uses a second input for bell triggering, you can still get 3-way triggering from your pad using the "Roland 3-Zone Ride" pad type, but you will need to use two inputs on the eDRUMin. In this configuration, the second input acts as a 'Bell' input and the triggering will behave much like it does on a Roland module.

Adjusting the Controls

To enable Bell Sense, click on the 'Bell Sense' label. When the control is enabled, the 'BELL' articulation becomes visible in the Note Panel.

Next, click on the Cymbal Type control until you find the setting that best matches your cymbal.

The Thresh control can be used to fine tune the cutoff between Bow and Bell articulations. When you hit the cymbal, an indicator moves inside the meter area. When the indicator lands in the green part of the meter, the bell articulation will be triggered. For best results, you should leave the Thresh set close 75.

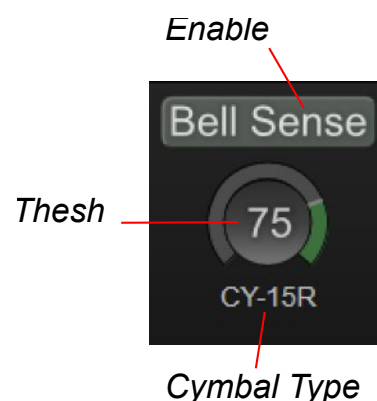

Positional Sensing

eDRUMin supports positional sensing for 'Mesh Center Piezo' or 'Mesh 3 Side Sensors' pads as well as compatible cymbals. The device can send out the position as a Control Change message (CC), or a separate Edge Note.


High Pass Filter

eDRUMin 12 uses new circuitry which results in more bass frequencies. For most mesh pads, enabling the high pass filter improves positional sensing and hotspot suppression.

Setup For Mesh Center Piezo Pads

Start by adjusting the Range controls. In the picture on the right, the Range controls are represented by the green bar, and a red line represents the positional measurement.

The Min Range control defines the size of the 'center' region of the pad. When hitting directly in the center of the pad or even slightly off-center, the position indicator should fall to the far right, but as you hit closer to the edge, the red indicator will suddenly jump over towards the left. The Min Range control should be set somewhere between the far left and the point where the indicator just starts to jump to the left.

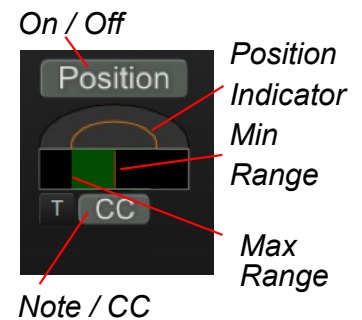

The Max Range control helps define the sizes of the off-center and edge portions of the pad. As you drag the control further left, the size of the off-center region increases and the size of the edge region decreases.

If using a stereo pad, an additional control is available by clicking on the 'T' to change it to 'R'. 'R' is for ring, and this control uses information from the ring piezo to improve stability of off center hits. When the red indicator falls into the orange rectangle, the measured position is constrained to be at least 64.



Understanding the Positional values

When the pad is hit in the center, the eDRUMin sends a CC value of 0, at the point where the positional sensing begins to register, it sends a CC value between 64 and 127 depending on how close to the edge you hit.

If you are sending a Note instead of a CC, the eDRUMin will send the 'edge' note when the calculated CC value is greater than 95. You can adjust Range Max control to adjust the transition point between 'center' and 'edge'.

Setup For Cymbals

There are two different positional sensing algorithms for cymbals. The first one is designed to support Roland and ATV cymbals, and the second is a more generic approach that was designed to support the Lemon 18" Ride and may also work with some other cymbals.

You can switch between the two algorithms by pressing the button shown in the image on the right.

The rest of the controls work in a similar fashion as described above.



Switch Positional Sensing Algorithms

Setup For Mesh 3 Side Sensors Pads

Positional Sensing for pads with 3 side sensors was modeled using an ATV S13 snare and a Roland PDA-120LS and may not generalize with other pads. For best results, make sure you scan time is between 2.3 and 2.6 ms.

There are 3 filters to detect off-center and edge hits. Each filter can be turned off by setting its value to zero.

A hit is first processed by the Off-Center control. If not 'handed' by the Off-Center control, the hit is sent to the Time Thresh Control.

Note: All hits are processed by the Edge Thresh and it trumps the other two controls.

Off-Center Size

The image on the right shows how this control works. Roughly speaking, any hit in the yellow area will be 'handled' by this control.

And any hit that falls into the green area will be detected as 'off-center' and assigned a CC value between 64 and 127. Any other hit in the yellow area will be assigned a CC value of 0.

For low values, few hits will be detected as off-center, making the center area large. However, this also results some hits closer to the edge to be marked as center (unless caught by the Edge Control).


For high values, more hits towards the edge are marked as 'off-center', but the size of 'center' area is reduced, so there's a trade off. For best results, set this control as high as you can without making the center too small.

Note: The size of the yellow area is influenced by the input's scan time setting. For good results, a minimum of 2.3ms is needed. Increasing the scan time up to 2.7ms may increase the size of the yellow area.

Time Thresh



Only hits not handled by the Off-Center control are processed by the Time Thresh control, so it's often helpful to turn off the off-center control off when making adjustments.

The indicator of the Time thresh control shows the length of a hit. If the indicator falls inside the green part of the control, then the hit is deemed to be an off-center hit and assigned a CC of 64.

By default the indicator must be *greater* than the threshold, but by clicking the  button you can change it to *less than*.

Edge Thresh

If your pad is stereo (dual zone), information from the ring sensor can also be used to detect hits close to the edge of the pad. If a hit falls into the green area of the meter, the hit will be assigned a CC value of 127. The control adjusts the size of the green area.

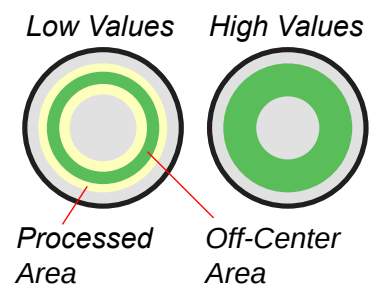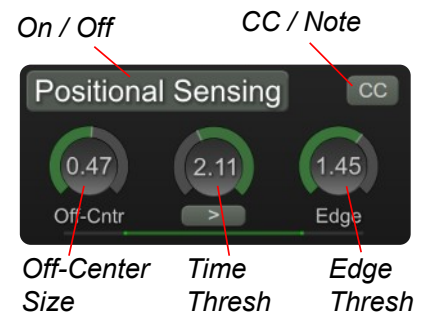

Hotspot Suppression

One of the annoying qualities of a mesh pad with a center mounted piezo is a sensitive region of the drum head directly over the piezo. The Hotspot Suppression control detects impacts over the piezo and suppresses their amplitudes, evening out the response of the entire playing surface.

The hotspot suppression needs about 2.3 - 3 ms of data to work properly. If you have the [SCAN](#) control set below 2.3 ms, the control will become disabled.

There are 3 separate controls, 'Thresh', 'Amount', and 'Scaler' which is a small knob on the inside of the 'Thresh' control.

Start by adjusting the 'Amount' and 'Scaler' controls to zero. Next, watch the meter of the 'Thresh' control as you hit different parts of the drum head. As you hit the pad around the hotspot, you should see the meter values increase. Set the 'Thresh' control so that hits away from the hotspot register in the dark part of the meter, and hits over the hotspot register in the green part of the meter.

If you find that it difficult to get good separation between the hotspot and area further off center, you can try increasing the 'Scaler' control. This gives you better separation, but reduces the ability to suppress low velocity hits on the hotspot.

After you have properly set the 'Thresh', adjust the 'Amount' control to reduce the amplitude of the hits that register in the green part of the meter.



Outside is Thresh.



Inside is Scaler.

Note: Hotspot suppression is designed to work with Roland style pad construction. It works by analyzing the waveform coming from a pad. If the incoming signal coming from your pad is not clean and free of noise, this feature will not work. This is a particular concern for A→E conversions and DIY pad construction. Visit the [eDRUMin troubleshooting forum](#) for more information.


Note: When you change drum sticks, you might need to adjust the THRESH control. Generally speaking, heavier sticks will need a slightly lower THRESH, and lighter sticks will need a higher THRESH.

Output Settings

These settings configure the MIDI messages that the device outputs for each input.

Pad Function

By default, inputs are set to 'Kit Piece', which means that they output MIDI notes based on the currently loaded drum map. Look [here](#) for more information on using drum maps.

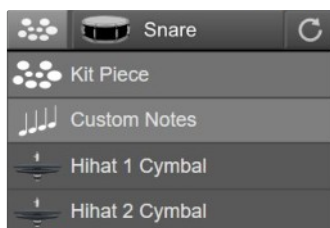

For more control over the notes a pad outputs, change the pad function to 'Custom Notes' as shown on the right.

This lets you change the notes without having to edit and load a custom drum map.



 
Note Panel

Depending on how an input is configured, you'll see up to 5 different note controls.

If the input is set to 'Hit Piece', then none of the notes will be editable, as they are being pulled from the drum map.

If the input is set to 'Custom Notes', then the notes can be adjusted by dragging with mouse, using the increment and decrement buttons, or by double clicking and entering a number or note.


Articulation note controls disabled when pad setup as 'Kit Piece'.



Articulation note controls editable when pad set to use 'Custom Notes'.



Note: You can switch showing Notes or Note Numbers by right-clicking on a note control. This will change the setting for all note controls and the setting will be remembered the next time you open the Control Application.

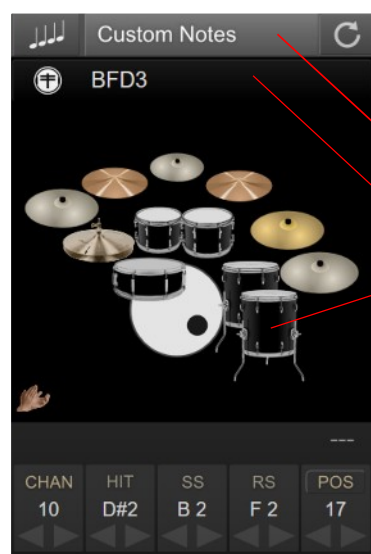

Pull Notes from Drum Map

If your pad is set to 'Custom Notes', you can still pull notes in from a drum map.

1. Click on the 'Custom Notes' label.
2. Select the drum map to pull in notes from.
3. Click on the pad icon to set the notes.

POS

This is shown when positional sensing is enabled for the current pad. Positional Sensing on eDRUMin is communicated by either sending out a Continuous Control (CC) message corresponding to the position of the hit, or as a separate Edge note.

When set to output a CC, the eDRUMin defaults to CC16 for piezo based pads, and CC17 for cymbals. By clicking on the 'POS' label, you can set it to any CC number you'd like.

When set to output a positional note, again you can click 'pos' label to use custom note value, otherwise it will use the value defined in the drum map or in the note banks.

Click label to set a custom CC number.



Default CC based on pad type.


CHOKE

Choke is shown for dual zone cymbals that do not have positional sensing enabled.

While eDRUMin always sends aftertouch messages for cymbal choking, it can also send a MIDI Note for choking your cymbals. When set as a 'kit piece', this is automatically controlled by the drum map.

When set to 'Custom Notes', you can enable choking with a MIDI note by clicking on the 'CHOKE' label.

Click CHOKE to enable choking with MIDI Notes

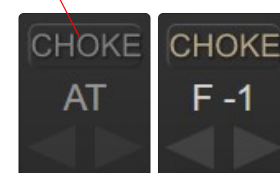

Disabled

Enabled

Velocity Curves

Getting an electric drum pad to have the same dynamics as a real drum is a big challenge. Getting realistic drum rolls from a mesh drum pad, for example, can be tricky because the dynamics of mesh and a real drum head are quite different.

To overcome this challenge, eDRUMin devices implements cubic Bezier curves to remap the velocity curve of your hits. The Bezier handles let you draw all kinds of curves while ensuring a smooth transition from the lowest to the highest velocities.

In the image on the left, the curve is being used to make drum rolls on a mesh head feel like a proper drum. After you've gotten your pad triggering well, the Response Curve is the most powerful tool to get it sounding as natural as possible.

Upper Bezier Handle

Maximum Velocity



Minimum Velocity

Lower Bezier Handle

Note: By default, the articulations for a single pad all share the same velocity curve. To access independent velocity curves for each articulation, the device needs to be in Advance Mode (described on the following page)

Advanced Mode

To keep *eDRUMin* simple to use, some of the more advanced features are hidden by default. These features can be enabled by putting the device into advanced mode from the [Settings Panel](#).



Advanced mode unlocks the following features:

- Note Banks
- Custom MIDI channel setting for each input
- Adjustable note lengths for each input
- Velocity Gates
- Independent velocity curves for each articulation
- Control Change and Record assist functions for triggers
- [Impact Mode](#) for triggering the closed hihat articulation

Note Banks

When set to 'Custom Note', each input has four banks where you can save different sets of note assignments.

The currently selected bank can be changed by:


- Clicking on the bank number
- [Using a sustain, footswitch or rotary encoder](#)
- [Sending Program Change messages](#)



Hihat pedals also have four note banks. When the hihat pedal is linked to a trigger input, their selected note banks are also linked. Changing the selected note bank for the hihat cymbal will also change the selected note bank for the hihat pedal and vice-versa.

More MIDI Settings




By clicking on the  icon, you can access more MIDI settings for the input. You can change the MIDI channel used by the input, the length of the notes outputs, as well switch to using Velocity Gates (next page).

MIDI Channel

Normally inputs will use the device's Global MIDI channel (GC), which is set in the Settings Panel. However, by clicking on the 'CHAN' label, you can define an independent MIDI channel for each of the four banks.

Click on 'CHAN' to use a custom MIDI channel.

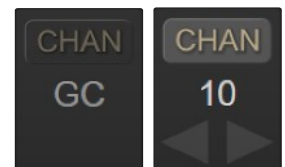

Note Length

The note length control can be set between 30ms and 8s. Setting a long note length can be useful ensuring cymbal choking aftertouch messages arrive between the Note on and Note off messages (Ableton Live requirement).

Velocity Gates

eDRUMin input have the ability to trigger two different notes depending on how hard the pad or cymbal is hit. This is only available for input that are set to use Custom Notes. To access the velocity gates, be sure your device is in advanced mode, and then click on the ⚙️ icon and set the switch to Gates.

Banks ☐ Gates

Editing the Notes


The four Banks that are normally available will be reduced to 2, and renamed to L1 and L2. Select L1 and edit the notes for the lower velocity hits, and L2 to edit the higher velocity hits.

Setting the Thresholds

The threshold between L1 and L2 for each articulation is set using the rightmost yellow and red bar in the velocity curve section.

You can switch between the articulation by clicking on the labels of the note controls.

NOTE: Note banks and Velocity gates use the same memory locations on the device, so any changes you make to the notes assignments for velocity gates will be reflected in banks 1 and 2, Bank 4 is used to store the threshold levels.

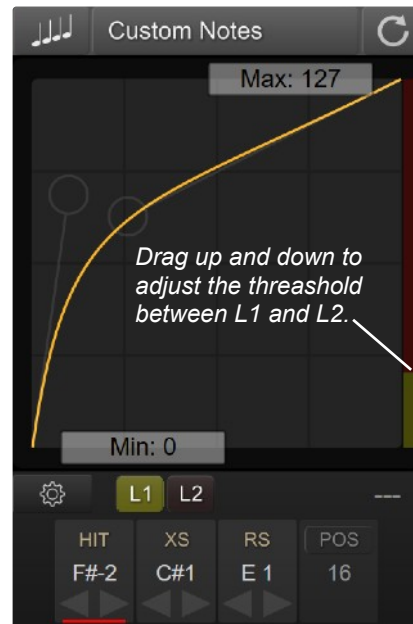



Independent Velocity Curves

An independent curve can be setup for each articulation of a pad. By default, each articulation shares the same velocity curve as the first articulation.

To enable an independent curve, select the articulation by clicking on its label. Next click on the 'Independent' button.

If a device is returned to 'Standard' mode, all articulations will go back to sharing the same curve as the first articulation.

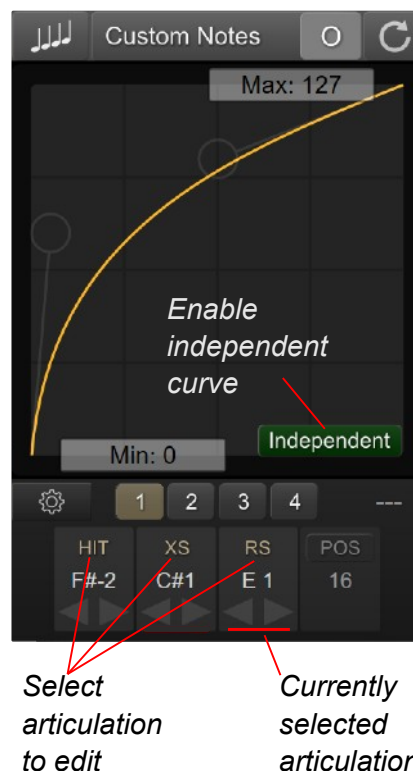

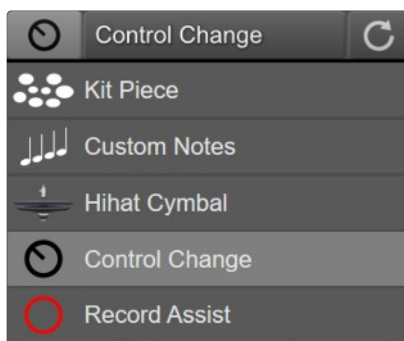

Sending Control Change Messages

Both the Control Change and Record Assist allow trigger inputs to send control change messages. The only difference is that the Record Assist function allows you to delay sending its control change message until another trigger input is hit. See below for more details about using [Record Assist](#).

Changing CC Values

The CC values that an articulation sends can be adjusted the same way as notes. You can also use the banks to have up to four sets of CC messages.

CC Mode

Each articulation can be set to operate in 3 different modes.

Toggle

The articulation will alternate between sending On (127) and Off (0).

On / Off

On (127) and Off (0) will be sent each time you trigger the articulation.

Single

Only the On value (127) will be sent each time the articulation is triggered.


Use Velocity

When this option is selected, instead of sending 127 for the On message, the articulation will use the velocity of the hit.

Parameter Feedback

If an input is set to toggle mode, eDRUMin will monitor its MIDI input sources and synchronize the toggle state. You can use the [MIDI Monitor](#) to confirm that the state is being properly updated.

Click to adjust extra options

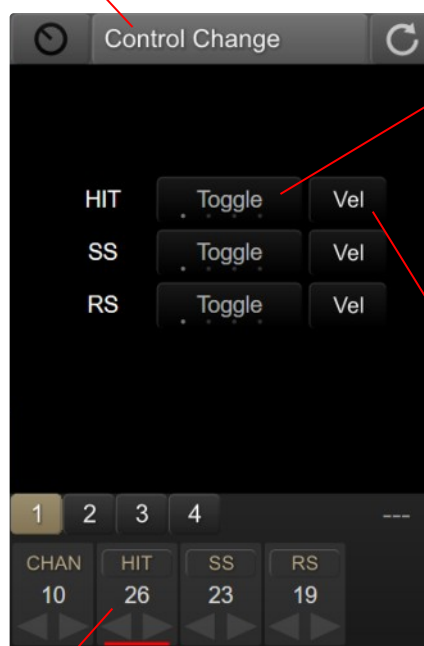

CC Mode
 - Toggle
 - On Off
 - Single
 - Disabled

Use Velocity

Notes controls are used to set the CC that each articulation uses.


Record Assist

Record Assist mode was designed to allow for recording loops by intelligently sending control change messages to 3rd party applications, such as [SketchPad Looper](#). The idea is to send a control change message to start recording the instant a pad is hit and then send the control change message again when the loop is finished.

The Record Assist functionality only applies to the first articulation of a pad or cymbal (HIT or BOW). All the other articulations for the pad will simply send control change messages. So to simplify the description below, when I say ‘hit the pad’, I mean hit the ‘head of the pad’ or ‘bow of the cymbal’.

Record Assist States

There are three states for a pad that is set to record assist: inactive, armed, and recording. The current state is reflected in the color of the icon shown for the input: black, orange, and red, respectively.

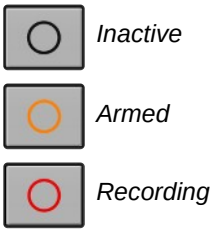

Armed State

The device is placed in the armed state by hitting your Record Assign Pad. Once in the armed state, the device waits for a trigger event (defined below). When it detects a trigger event, it sends the control change message defined for the pad and moves on to the Recording State.


The trigger event can be any MIDI Note On message from a pad connected to the eDRUMin, devices connected via the USB host port, or devices connected to the MIDI in DIN port.

Recording State

Once in the recording state, hitting the pad again, will cause the device to send the control change message again (to stop the recording) and then return to the inactive state.

Example Usage based on setting shown right.

Action	Record Assist Output
Hit the Record Assist Pad to arm the recording.	No Output
Starting performing a loop.	CC 26 value 127 CC 26 value 0
Hit the Record Assist Pad to stop the recording.	CC 26 value 127 CC 26 value 0

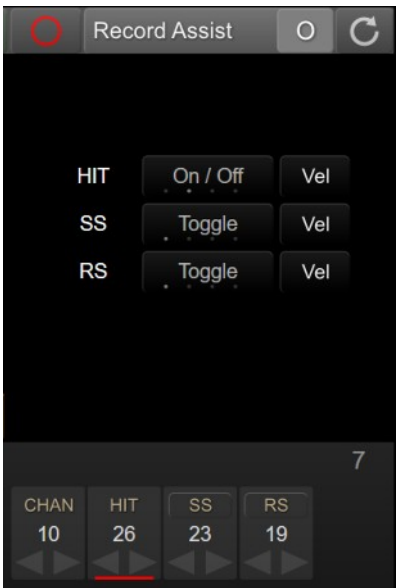

Using a Roland BT-1

eDRUMin has built-in support for Roland's BT-1 trigger bar. The BT-1 is capable of running in two different modes.

BT-1 setup on a stereo input

Switch between 'Sensor' and 'XTalk' modes



Sensor Mode

This is the default setup for the BT-1. In this mode, you get the full dynamic range of the trigger bar. This mode is suitable if the BT-1 is not directed connected to another pad.

Note: If the BT-1 is connected to an input in 'Dual Mono' or 'Mono' mode, the BT-1 will always operate in sensor mode.

Xtalk Mode

 
If your BT-1 is connected directly to another pad, you will likely need to use it in Xtalk mode in order to prevent the BT-1 from mistriggering when you hit the pad it's attached to. In order to use Xtalk mode, the BT-1 must be setup on a stereo input.

Link to Input

When using Xtalk mode, you must link the BT-1 with the pad that your BT-1 is attached to. This prevents that pad from mistriggering when you hit the BT-1. To link the two inputs input, follow the diagram below.

When linked to a dual piezo type pad, only sidestick articulations will be filtered out, so the BT-1 and the head or rimshot of the snare can still be simultaneously triggered. For switch based pads, only the BOW or HEAD articulation will be filtered out.

- 1 Make sure the BT-1 is in Xtalk mode.



- 2 Click 'Link to Input'



- 3 Select the input to link the BT-1 to.



- 3 When linked and the BT-1 is selected, both inputs will be highlighted in orange.




Adjusting Crosstalk Cancellation To Linked Input

Once the BT-1 is linked, the crosstalk control no longer applies crosstalk cancellation to the BT-1, instead, the crosstalk control applies an extra amount of crosstalk to the linked input. The default value of 15 should be good for most setups. Applying too much crosstalk to the linked input will affect the ability for linked pad to accurately trigger when the two pads are hit simultaneously.

Preset Manager

The Preset Manager allows you to quickly load settings for your pads and pedals. It comes with factory presets for many commercially available pads and hihat controllers, but also allows you to create, import, and export your own presets.

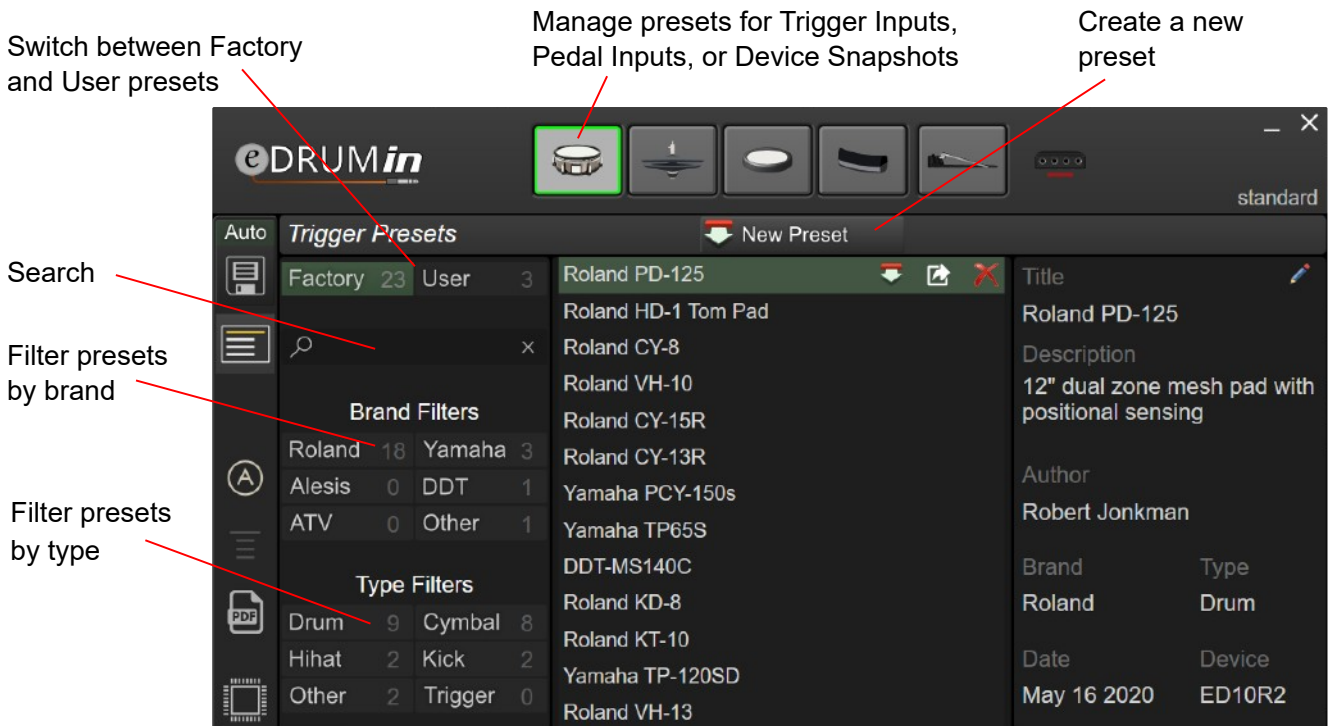


How Presets Work

eDRUMin devices only have one set of settings. Whenever you are making changes using the Control Application, you are making changes to the settings on the device.

However, using the Preset Manager, you can download those settings and save them to your computer. Likewise you can use the Preset Manager to send saved settings from your computer back to the device. However, its import to remember that whenever you are adjusting controls in the Control Applications, you are always editing the settings on the device and not the settings saved on your computer and in order to update the settings saved on your computer, you would load a preset, make changes with the control application, and then overwrite the preset again.

Preset Types

You can save and load many different types of presets and by clicking on icons at the top of the UI. There are device snapshots, trigger presets, pedal presets, and drum maps. Device presets stored on a USB flash drive are special and described [here](#).

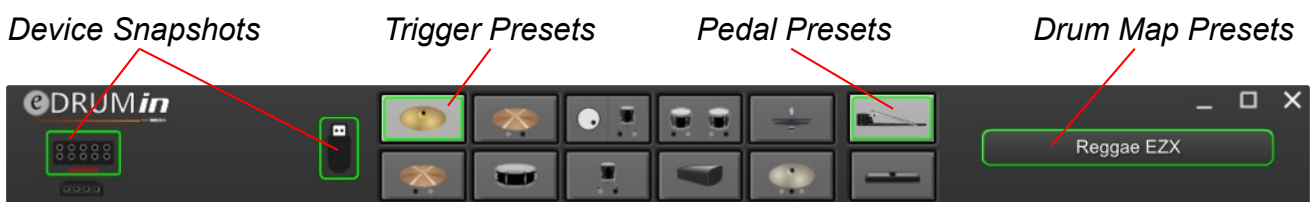


Finding Presets

Trigger presets, pedal presets, and drum map presets are broken down into 'Factory' and 'User' presets. Factory presets list all the presets that came installed with the control application, and user presets lists any of the presets that you have created yourself.

You can further filter the list of preset using the search function or with the Brand and Type filters.

Next to each filter is a number that indicates how many presets are associated with that filter.

Clicking on an active filter will deactivate it.

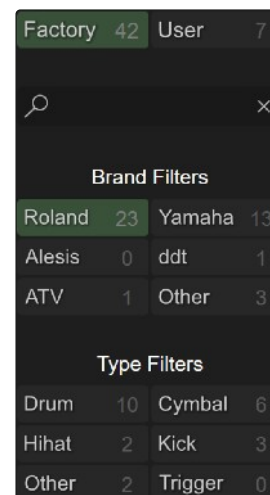


Loading a preset

Double-click a preset to load it. Upon confirmation, the preset is sent to the device replacing existing settings. If Auto Save is on, the preset is saved to the device's memory. If Auto Save is off, power cycling the device will restore your previous settings.

Loading Trigger and Pedal Presets

Factory presets load all the settings for an input except note assignment.

When loading user presets however, a dialog box allows the user to chose which settings to load.

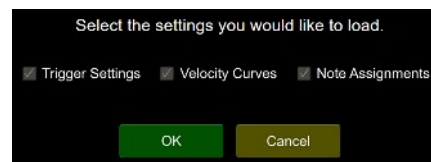

Loading Device Snapshots

By default, all the settings in a snapshot will be loaded, but by clicking 'Use custom load option' the user can specify which parts of the snapshot to load, or inputs to apply settings to.


In the example on the right, only the input settings for the first pedal input will be loaded. All the other settings in the snapshot will be ignored.

The load options are saved inside the preset, so whenever you make changes, you need to save the preset by clicking on the save icon in the upper right corner.

You can however, make changes to the load options and send the snapshot without saving.


Send MIDI

Upon loading a snapshot, you can have the eDRUMin send a program or control change message to keep external hardware / software in sync with your snapshot changes.

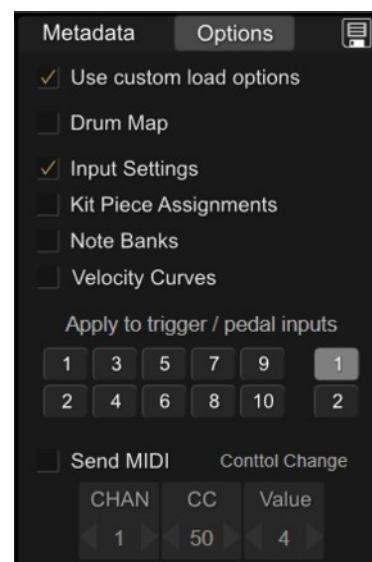

Working with User Presets

When you select a user preset, a set of icons appear to the right.

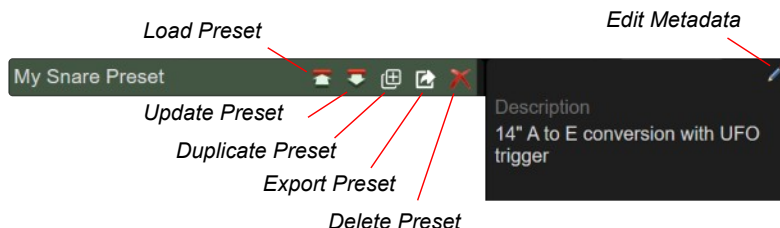

Load Preset

Sends the preset to the device. Alternatively, double-click the preset.



Updating a Preset

This downloads the settings for the selected input or device, overwriting the previous contents. The metadata for the preset is preserved.



Duplicate Preset

Makes a copy of a preset and places it in the User Presets folder.



Editing Metadata

Edit the metadata for a preset without changing the contents of the preset itself.



Exporting a Preset

This exports the preset (.edp) to your desktop. A notification showing the name of the file is displayed. You can then backup that preset or share it with others.



Deleting a Preset

Click to delete a preset. A confirmation dialog is displayed.

Creating User Presets

A new user preset is created by clicking on the 'New Preset' icon.



The settings from the device are then downloaded and stored to your computer. A dialog box is displayed, allowing you to set metadata for the preset.

Carefully setting the metadata is highly recommended, especially if you plan to share your presets with others.

A screenshot of the 'Save new Trigger Preset' dialog box. It features a grid of buttons for selecting a brand (Roland, Yamaha, Alesis, ddt, ATV, Other) and a sound type (drum, cymbal, hihat, kick, percussion, acs. trigger). Below the grid are text input fields for 'Title', 'Description', and 'Author' (pre-filled with 'Joe Drummer'). At the bottom are 'Save' and 'Cancel' buttons.

There is no need to save your device settings before creating a user preset. The preset will always include any unsaved changes.

Importing Presets

A preset can be imported into your user presets by dragging and dropping an .edp file onto the Preset Manager. A notification is displayed and the preset is added to the list of User Presets.

Device Snapshots on USB Flash


eDRUMin 8 and 10 include a USB host port and by connecting a USB flash drive to this port, you can save device snapshots to it.

The advantage of saving device snapshots to a flash drive is that they can be loaded using an [attached footswitch](#), [sustain pedfal](#), [rotary encoder](#) or MIDI Program Change messages (Channel 14, values 1-32) without having the eDRUMin Control Application open or even having the eDRUMin connected to a computer.

If the flash drive icon with a flashing red 'x' appears, this indicates are [error](#) using the flash drive.



You can create a new flash device snapshot by clicking the 'New Preset' icon or by duplicating an existing snapshot.

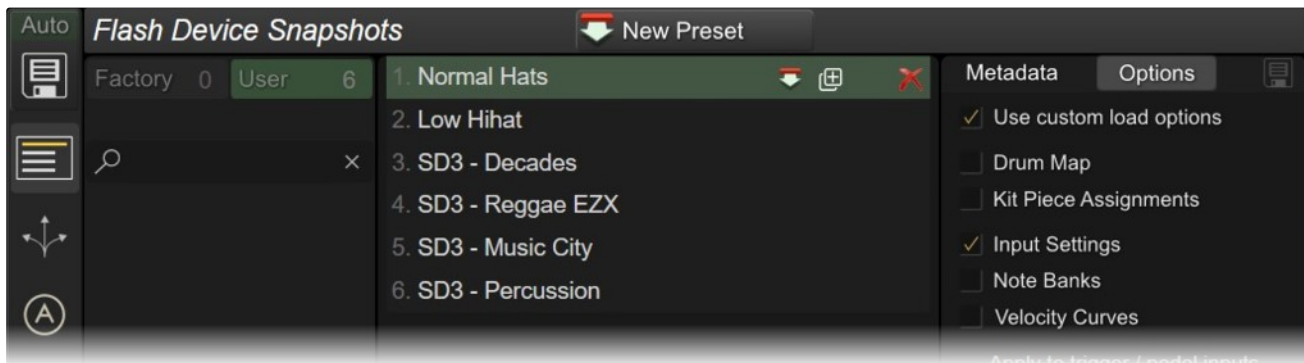

The snapshots are saved as an ordered list. You save up to 32 snapshots on the flash drive and they can be reordered by dragging snapshots up and down through the list.

Look [here](#) for information on how to load flash preset using a pedal.


Drum Map Editor

Drum maps allow your eDRUMin to easily switch between triggering between different hardware / software applications.

eDRUMin comes with several factory drum maps, but users can also create and edit their own maps with the Drum Map Editor which is integrated into the Preset Manager. Click on the drum map button, shown right, to view, load, or edit the drum maps on your system.

Open the Drum Map Editor

Superior Drummer Map

To start editing a drum map, either click  New Preset to create a new user drum map from the one already stored on your device, or duplicate a factory preset.



When you duplicate a factory preset, it's automatically placed in your user presets and selected for editing.


After editing a drum map, you must save it by clicking on the white save icon in the top right hand corner of the editor.

Once saved, double-click on the drum map to send it to the device. If you have more than one device connected to your system, the map will be sent to whichever device is currently selected.

Save drum map



You can have drums sent to all connected device by enabling 'Send drum maps to all devices' from the [Settings Panel](#).

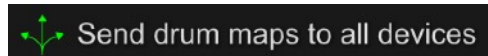

Note: With this option enabled, even drum maps stored in device snapshots will be sent to all devices.

Parts of a Drum Map

A drum map is broken up into two pages of kit pieces (32 total) and a page for hihat pedal / cymbal.


Page 1 Kit Pieces

Each kit piece has four notes associated with it. The labeling of the notes depends on whether the image associated with the kit piece is a pad, cymbal, or percussion.


The first three notes are the standard 3 zones that most pads and cymbals can trigger, but the forth note's function varies depending on an input's settings.

If the input supports positional sensing, then this will correspond to the positional CC that the pad should use.

If the pad type is a cymbal and the choke label is enabled, then this note represents a choke note that is sent along with aftertouch. Look [here](#) for more information about enabling choking with notes.

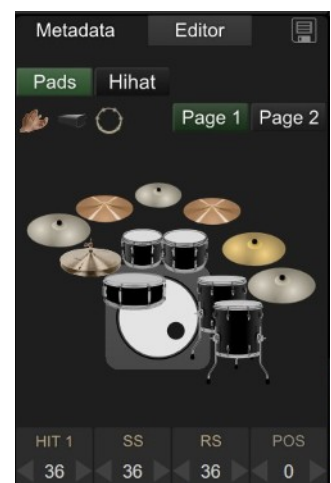

Page 2 Kit Pieces

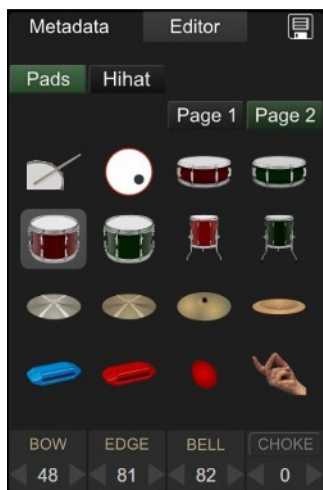

While the page 1 kit pieces will be sufficient for 95% of users, Page 2 kit pieces are for those with more complex setups.

Page 2 lets you define an additional 16 kit pieces, and unlike the page 1 which has predefined images, the images for kit pieces on page 2 can be changed.

To change a kit piece's image, right click on it and select an image from the list of available images.



Additional Kit Piece Images


Hihat Pedal / Cymbal

The hihat section defines the notes that any pads which are set to 'Hihat Cymbal' will trigger when the hihat pedal is in [Levels Mode](#).

NOTE: If the hihat pedal is in [CC Mode](#), then any pads that are set to 'Hihat Cymbal' will trigger the notes defined by the hihat kit piece from Page 1 kit pieces.

By clicking on the various levels, you can adjust the notes that are assigned for each level. You can drag and drop levels onto each other to quickly copy assignments.

The number of level in drum maps is fixed, so you might find it helpful to duplicate some of the levels for use in applications that support fewer levels of openness.

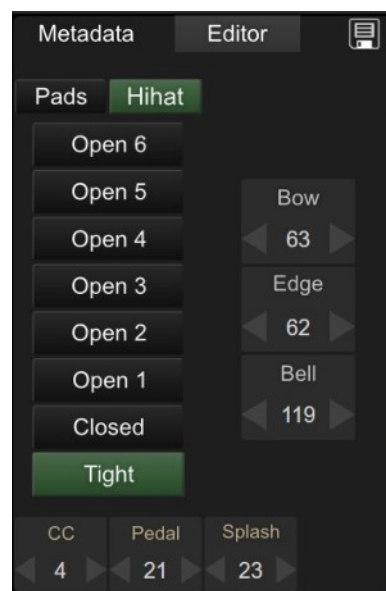

Drag and Drop

Drag and drop is supported within a drum map, and also between drum maps.

For example, you can drag one kit piece onto another to copy its note assignments. The same goes for hihat levels. You can drag one hihat level onto another to copy note assignment.

You can also drag kit pieces, hihat levels, all pads, and all hihat settings between drum map presets. When you do this, the target preset is updated and saved immediately.




Copy notes by dragging one kit piece onto another.

Pedal Editor

The pedal input(s) on the back of an eDRUMin supports a wide array of pedal types including hihat controllers, expression pedals, sustain pedals, footswitches, and rotary encoders.

You can open the pedal editor by clicking pedal input icon at the top of the UI.

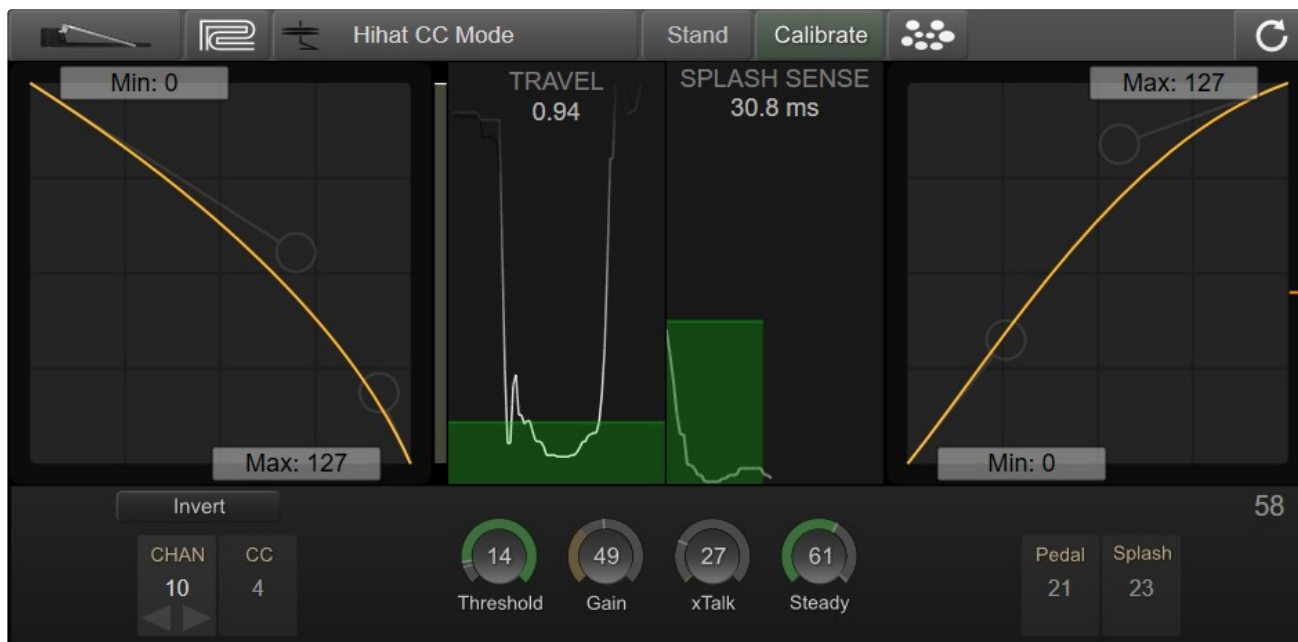

Pedal Type

The pedal input can perform different functions depending on the type of pedal it is setup for. By default it's setup for a Roland style hihat controller. If you are using a Yamaha compatible hihat controller, you will need to set the wiring style to "Yamaha".

Some hihat setups will need custom settings. Here are specific instructions for the [Roland VH-12](#) and [Hall effect sensor](#) based pedals.

You can change the pedal type by clicking on the hihat controller icon.

Settings for Hihat and Expression pedals is described on the following page. Settings for footswitches and sustain type pedals is described [here](#).

If you set the pedal type to 'Auto Detect', make sure you connect your cable to the pedal / controller before connecting it to the eDRUMin.

Hihat Controller




Roland style wiring



Yamaha style wiring

Click to change pedal type

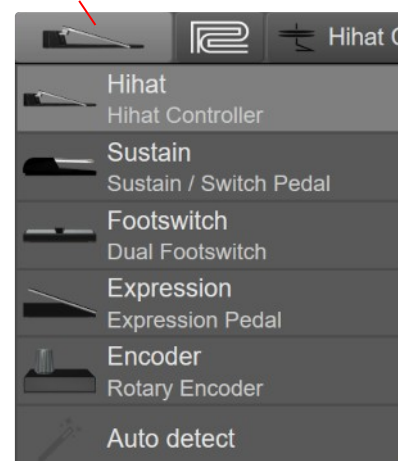

Hihat Controllers and Expression Pedals

When a hihat or expression pedal is connected, it is automatically setup to act as a hihat controller, sending out CC messages for the position of the pedal, and velocity sensitive notes when pressing the pedal all the way down and performing heel splashes.


If using a hihat controller on a real hihat stand, make sure it is [properly setup](#) before adjusting any other settings.

Calibrating Your Pedal

You should calibrate your pedal even it seems to working fine when you first connect it. eDRUMin auto calibrates the pedal and won't lock in calibration settings until you go through the calibration process.

Click Calibrate to reveal the calibration range. Take the pedal through its full range of a motion. When done, click the calibrate control again to store the settings.


The calibration can be modified by dragging either side of the green range indicator.

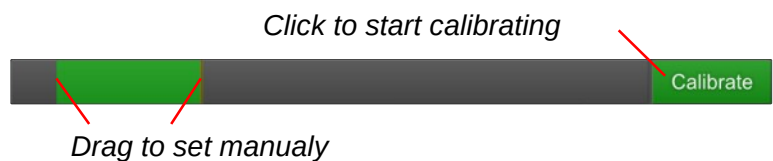

If you are using a hihat on a hihat stand, making adjustments to the tension of your hihat stand and clutch position will likely require you to re-calibrate your hihat controller for optimal results.

Modes for Expression Pedals and Hihat Controllers

By default expression pedals and hihat controllers will function as hihat controllers in CC mode as shown in the image below.

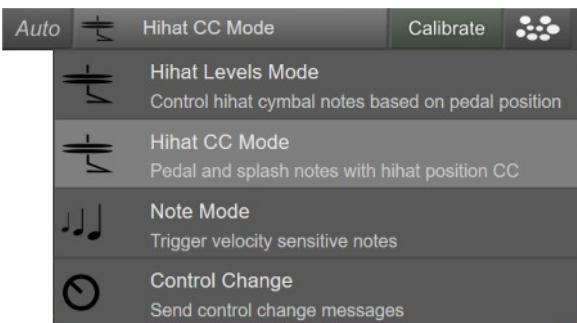


By clicking on the Mode control, you can change what the pedal does.

Only the two Hihat Modes are discussed in this manual. The other mode are more intuitive and if you want more information about them, please consult the [MIDI Expression User Manual](#).

Note Source

Like trigger inputs, by default a hihat pedal gets its note assignments from the device drum map, and they cannot be changed without editing the drum map. By settings the note source to Custom Notes, the CC, Pedal and Splash can be set directly in the Pedal Editor.

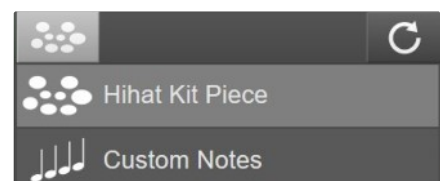

This setting also affects any trigger inputs that are set 'Hihat Cymbal'. If this is set to 'Custom Notes', than those pads that are set to 'Hihat Cymbal' will also use their 'Custom Note' assignments and not the notes defined in the drum map.

CC Mode vs. Levels Mode

A hihat controller has two basic functions. First, it communicates the position of the hihat pedal so that hihat sounds can vary in terms of their openness, and second it triggers velocity sensitive pedal and splash notes when you press the pedal all the way down.

CC Mode and Levels Mode handle triggering pedal and splash notes in the same way, but differ in the way they handle communicating the hihat position.

CC Mode

CC Mode sends out a CC message corresponding to the position of the pedal. Many applications can use this CC to determine which hihat sound to trigger.


The Curve control allows you adjust the dynamics of the CC message values.

It can be turned on and off by simply clicking in the background of the control.

You use the Bezier handles to adjust how fast the hihat opens and closes when you press the pedal.

The MIN control allows you to simulate a hihat, clutch, allowing you to restrict the amount of openness when the pedal is fully released.

Pull down the min to simulate hihat clutch adjustments.

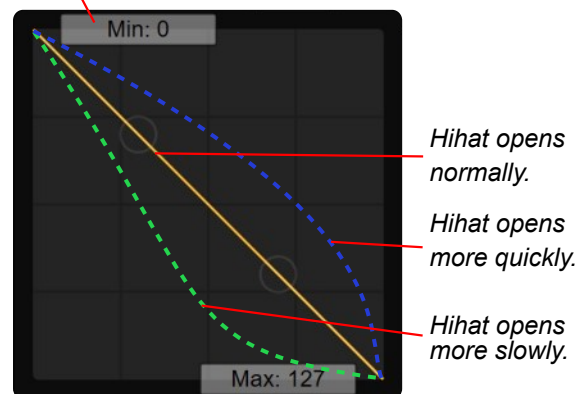


Levels Mode

With Hihat Levels Mode, eDRUMin takes more control over which hihat sounds are triggered by using different sets of MIDI notes for the hihat cymbal depending on the position of the pedal. This mode is suitable if you require more control over the transitions between your hihat sounds or for applications and devices that do not process CC4 messages.


To work properly, the input your hihat cymbal is connected to must be set to 'Hihat 1 Cymbal' or 'Hihat 2 Cymbal', depending on the pedal input you are using.

Set the currently selected level

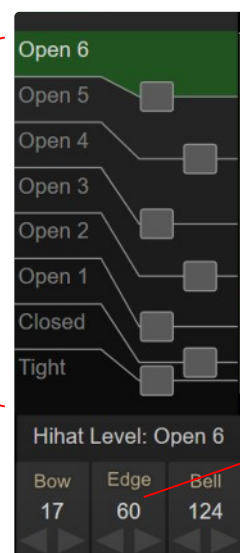

Adjust transitions between levels

Set or view MIDI assignments for selected level.

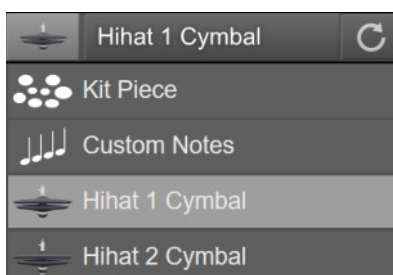

Adjusting the Responsiveness of Closed Hihat Notes and Splashes

Controller Type

Pedal

There are two algorithms for triggering closed pedal notes. 'Pedal' is for setups that use a detached hihat pedal (ex. Roland FD-8, Yamaha HH65), and 'Stand' for setups that use a real hihat stand (ex. VH-10, ATV AD-H14)

Travel

The travel control determines where along the pedal's travel the velocity for a closed pedal note is calculated. In the image on the right, the line traces the position of the pedal over time. The pedal must pass into the green area in order for a note to be generated.


If you are using a two piece hihat like a Roland VH-13, make sure the green area is a little above the point where the two hats come together.



Splash Sensitivity


Any time a pedal note is triggered, a splash note can also be triggered if the pedal reopens quickly enough. The height and width of the green box in this control is used to adjust the sensitivity.

A splash note will be triggered the moment a pedal transient travels up and out of the box like it does in the picture on the right. The width of the box sets the maximum time window in which a splash can be triggered, and the height determines how far the pedal must reopen.

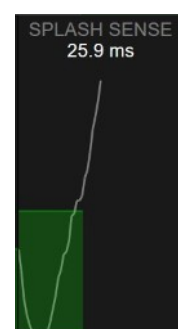

Threshold

The threshold control sets a minimum amount of force required to trigger a pedal / splash note.

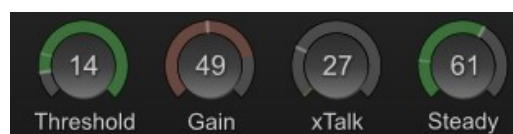

Gain

Turn up the gain control to increase the velocity of your pedal / splash notes.

xTalk

If pressing down on your hihat pedal causes your hihat cymbal to mistrigger, you can use the xTalk control to filter out those false triggers. The meter measures the strength of the signal on your hihat cymbal when you press the hihat pedal down quickly. Set the control above the meter to prevent those false triggers.


SteadyHats

SteadyHats is designed to hold your hihat position steady immediately after hitting your hihat cymbal. If your cymbal pad is mounted on a hihat stand, then hitting the cymbal will cause the hihat position to change very suddenly. These sudden position changes can cause unwanted audio artifacts in some applications.

The green meter shows the maximum amount of movement that will be filtered. The indicator inside the meter shows the amount of movement that was filtered out after the last hit. If the indicator moves past of the green area, filtering will stop until the next hit.

Velocity Curve

The velocity Curve control allows you to shape the velocity response of pedal and splash notes. It works exactly like the one for trigger inputs. Look [here](#) for more information.

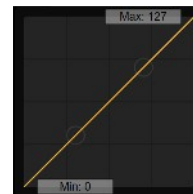

Impact Method (Advanced Mode)


If your device is in [Advanced Mode](#), you can use the 'Impact' method of triggering close hihat pedal notes. With this method, the velocity of pedal notes is determined by the vibrations of the hihat cymbals as they come together when the hihat pedal is pressed. It's very important that your hihat trigger settings are optimal. Poor choice of threshold and hit decay values will affect the ability to accurately trigger the closed hihat pedal articulation.



Hihat pedal Thresh


This needs to be set very carefully. Setting it too low will cause false triggering when your hihat cymbals move, and setting it too high will result in missed pedal events.

To make adjustments, use the yellow meter. The thresh setting will be optimal when the meter shows 5% to 20% while pressing the pedal to trigger the close hihat pedal note, like it does in the image on the right.

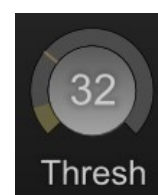


Scaler

The scaler control is used to determine the velocity of a closed hihat pedal articulation. Increase the value of the control to get higher velocity notes. The meter in this control displays the final velocity of the notes.

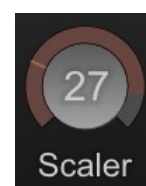

Advanced Hihat Options

For most users, these options should be left unchecked. They are advanced options most users do not need to be concerned with and can produce unwanted results.

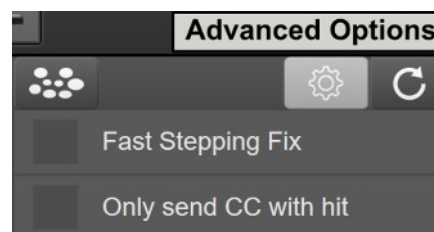

Fast Stepping Fix

In some drum triggering software applications, most notably Superior Drummer, rapid up and down movements of the hihat pedal can cause strange audible artifacts due to the way it transitions between hihat samples.

One way to remove these artifacts is to stop sending CC position values for a short period of time after a closed pedal note. Checking this box will do exactly that.

Only send CC with Hit

Superior Drummer will attempt to transition between hihat samples whenever the hihat pedal is moving. Most people regard this as a feature as it provides a more natural sounding hihat in most situations, but others do not like the subtle artifacts that it produces. By checking this checkbox, eDRUMin will only send the hihat positional CC just before a hihat note is sent. This effectively prevents the Superior Drummer from being able to transition between hihat samples at all.

Setting up VH-12 and Hall Effect Sensors

Roland VH-12

- 1 Set pedal type to hihat
- 2 Change the pedal polarity to 'Roland'
- 3 Click to calibrate
- 4 Use your mouse to adjust the sides of the green rectangle.

Most Roland Hihat controllers can be calibrated intuitively, however the VH-12 is a bit of a unique beast. To get it to work properly, use the VH-12 factory preset or set it up manually as described below.

Hall Effect Sensors

eDRUMin is compatible with hall effect sensors. While the pedal sensing feature can properly detect some Hall effect sensor setups, you will likely need to set things up manually.

Self-Powered

If your Hall effect sensor is self or externally powered, the pedal type needs to be set to hihat and the polarity set to Roland, just like for the VH-12 mentioned above.

Requires Power From Jack

If your Hall effect sensor needs power from the eDRUMin, the pedal input type needs to be set to 'Expression'. The POLARITY control determines the function of the tip and ring connections.

- 1 Set the pedal type to expression pedal
- 2 Set the polarity




If the polarity is set to Roland, the ring will receive 3.3v



If the polarity is set to Yamaha, the tip will receive 3.3v

Look [here](#) for a recommended Hall effect sensor and wiring diagram.


Sustain Pedals and Footswitches

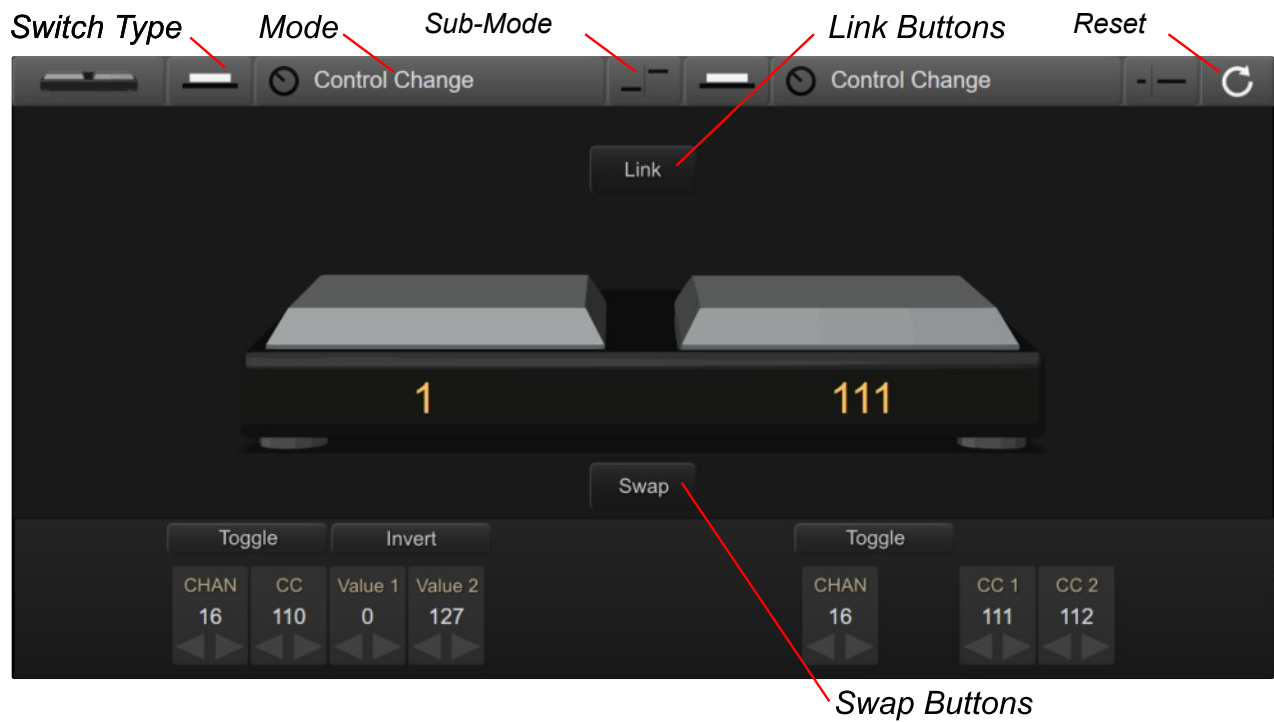


When a sustain or dual footswitch is plugged into pedal input of the eDRUMin, the pedal is automatically configured to change the Note Bank for the currently selected input. However, you can use the pedal input to perform a variety of tasks such as sending Control Change messages as shown above.

Modes and Sub-Modes for Sustain Pedals and Footswitches

You can change the function it performs using the MODE button.

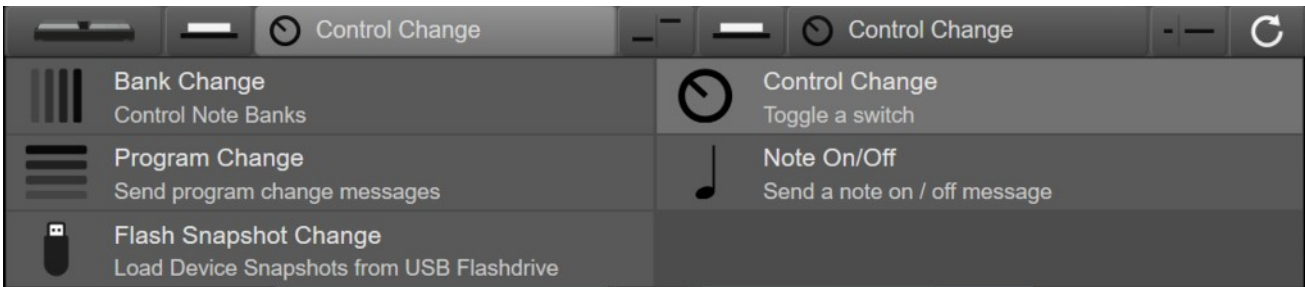

Most modes also include sub-modes which allow you to extend the function of your pedal using short and long presses.

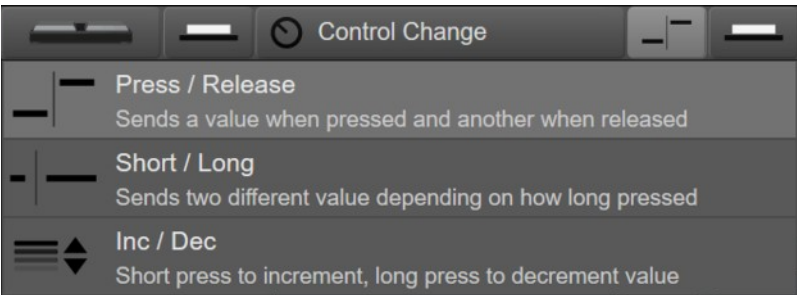

This manual will only cover Bank Changes and Flash Snapshot Changes, described on the following pages.

Fore more information about the other available modes, consult the [MIDI Expression Manual](#).


Using a Pedal for Bank Changes

When your *eDRUMin* is in **advanced mode**, each trigger input can be configured to use Note Banks and the selected bank can be controlled using a pedal plugged into the pedal input on the back of your device.

Targeting Inputs

There are three ways you can change banks. You can send bank changes for all inputs at the same time, to a single input, or to the currently selected input.

Use the Input control to select which input(s) to send bank change messages to.

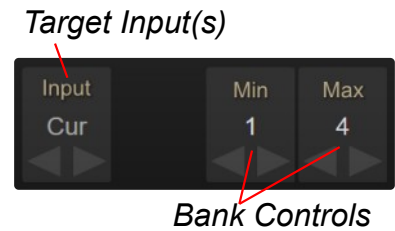

Send to Currently Selected Input

The lowest value is 'Cur' and means the bank change messages will be sent to the currently selected input. The idea is that you hit a pad to 'select' it, and then press the pedal to change its bank. If you have another *eDRUMin* connected to the USB host port, the bank change will only be sent to the selected input of the selected device.

Send to a Single Input

If you only need to change to bank of a specific input without needing to worry about whether it's selected or not, set the input control to match the input you want to change banks on. When sending to a single input, the bank change will never be sent to other *eDRUMin* devices connected to the USB host port.

Send of All Inputs

Use the greatest setting 'ALL' to send the bank change messages to all inputs, including all the inputs of any devices connected to the USB host port of an *eDRUMin*.

Note: Hihat controllers also have 4 note banks. If your hihat controller is **linked** to a trigger input, the banks for the hihat pedal will change whenever the bank for the input it's linked to changes.

Sub-Mode and Bank Controls

— Press / Release

This sub-mode lets you specify which bank to select when the pedal is pressed and released. If using a momentary switch, you will likely want to enable 'toggle' so you can switch banks every time the pedal is pressed.




— Short / Long

This sub-mode selects one bank when the pedal is quickly pressed and another when it is long pressed. It is only available for pedals that use momentary style switches. The bank only changes after the pedal is released so might not be appropriate for timing sensitive situations.



+— Inc / Dec


When using this sub-mode or using a linked footswitch, the banks controls will be called Min and Max and are used to specify the range of Banks to switch between. A short press will increment the selected bank, and a long press will decrement the bank.

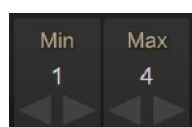

Flash Device Snapshot Change


If you have an *eDRUMin* with a USB Host port, you can connect USB flash memory (directly or through a USB hub) and save [device snapshots](#) to it. Then using a footswitch, sustain pedal, or rotary encoder, you can load those snapshots without needing to have the control application open or the device connected to a computer.


Select 'Flash Snapshot Change' by clicking on the mode button.

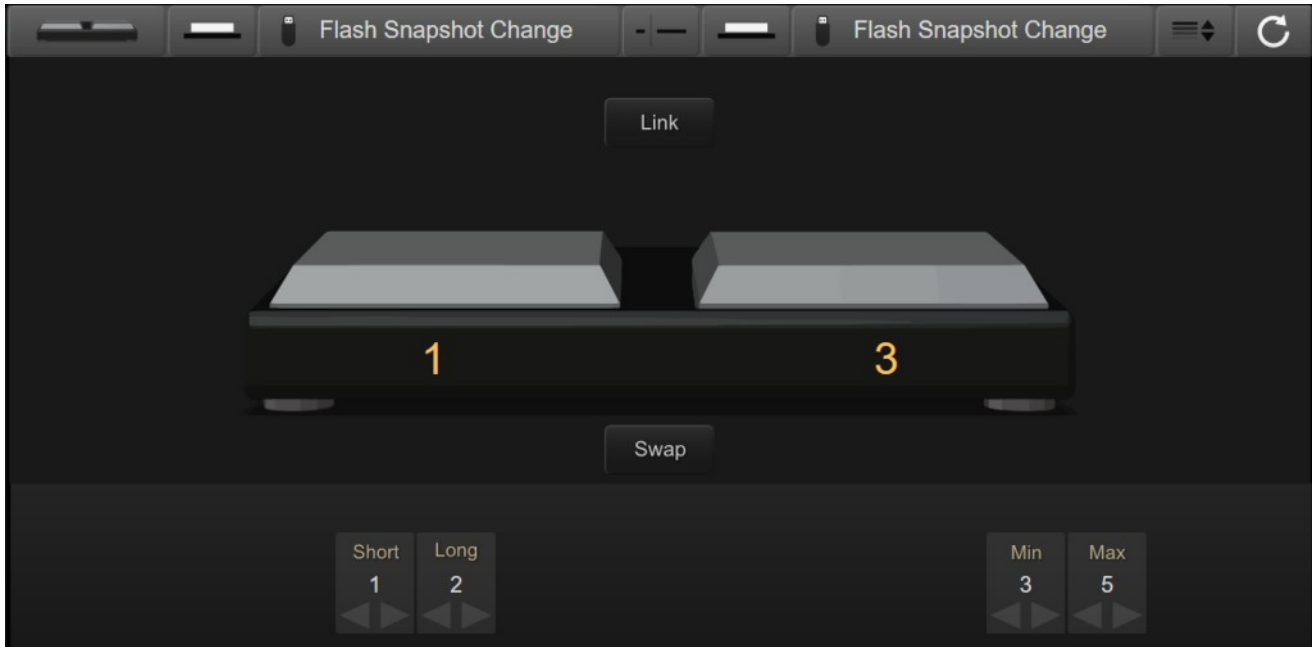

Just like with Bank Changes, there are 3 sub-modes available for Flash Snapshot Changes. They work the same as they do for bank changes and are described on the previous page. In the screenshot above the first switch is configured to use short and long presses to select snapshots 1 and 2, and the second one is configured to cycle between snapshots 3 and 5.

Settings Panel

The Settings Panel can be opened by clicking on the  icon in the sidebar on the left hand side of the display.

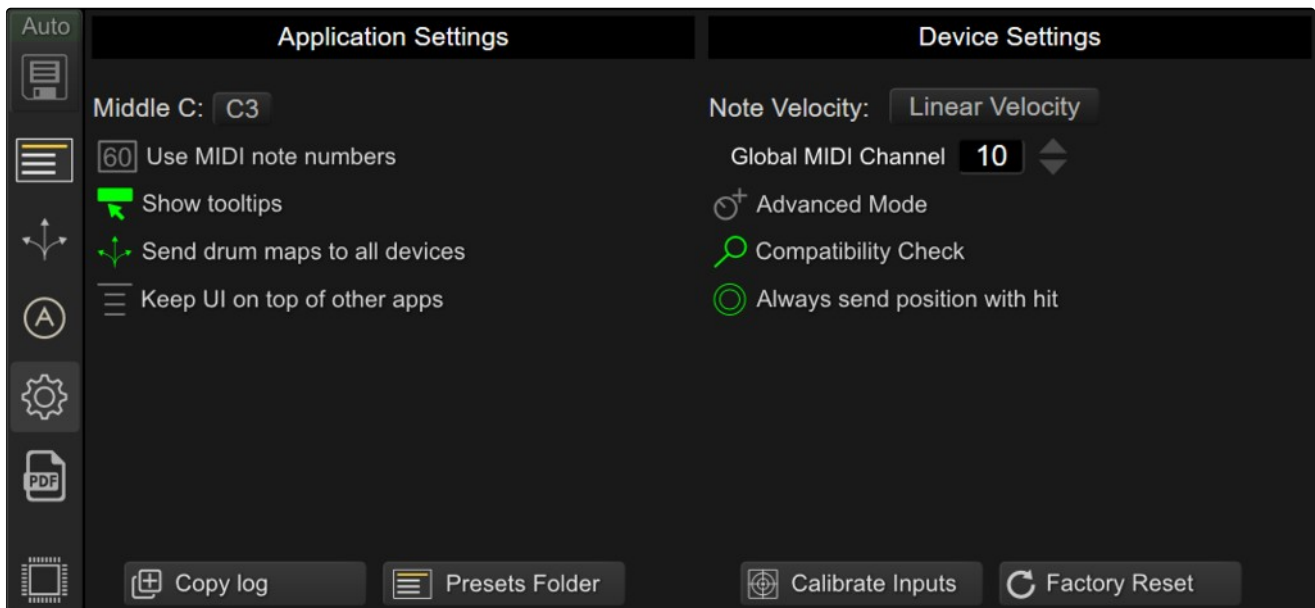

The settings panel is split down the center with Application Settings on the left and settings for the currently selected device on the right.

Application Settings

Middle C

By default eDRUMin defines middle C (note 60) as C3. This naming convention is also used by the majority of software applications. Roland, Akai, Korg, Alesis and Fabfiler (and probably some others) define Middle C as C4. BFD defines it as C5. To support all these different naming conventions, eDRUMin allows you define middle C as C2, C3, C4, or C5. Simply click on the control to switch between the various values.

60 Use MIDI Note Numbers

Switches to displaying MIDI note numbers instead of note names.

Send Drum Maps to all Devices

If you enable this preference, whenever a drum map is loaded, it gets sent to all the eDRUMin devices connected to your system, ensuring that they are all using the same drum map.

Keep UI on Top of Other Apps

The option is only available for Windows.

Presets Folder

This opens the Presets folder, allowing you to back it up or move it to another system.

Copy log

This copies the eDRUMin update log (MEC_Log.txt) to your desktop.


Device Settings

Note Velocity

There is no standard way to translate transient magnitudes to note velocities. Prior to version 2.4, the eDRUMin linearly mapped the magnitude of hit (force) directly to note velocities (linear force).

As of version 2.4, you can now change this to 'linear velocity' (new default), which is more similar to how a keyboard measures velocity, where velocity is a measure of how fast a keyboard key is moving downward.

When set to 'linear velocity', the eDRUMin translates the magnitude of transients to something resembling the downward speed of your drumstick. This removes the need for extreme velocity curves to get a natural velocity response in many applications.

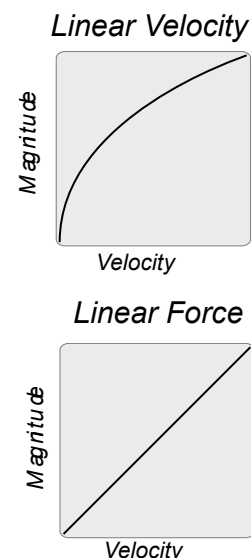

Global Channel

This is default channel that all trigger and hihat controllers use. When the device is in advanced mode, the channel that individual inputs use can be overridden. See [here](#) for more information.

Advanced Mode

Enables / disables advanced mode. Look here for more information.

Compatibility Checking

By default eDRUMin tries to protect dual piezo pads if they are plugged into an input setup as piezo / switch (most cymbals and Yamaha pads). It does this to prevent applying a DC voltage to the rim piezo. If the device thinks a piezo / piezo pad is connected, it disables the input and shows an exclamation mark.



If for some reason the Compatibility check is causing problems on your system, you can disable it.

Always Send Position With Hit

For pads and cymbals that use positional sensing, eDRUMin will normally only send the positional CC if the calculated position is different then the last sent position. This can be problematic when recording MIDI loops as well as applications that ramp CC values by default (Cubase 13+). By enabling this preference, the positional CC will always be sent.

Calibrate Inputs

This will calibrate the trigger inputs of your device to compensate to tolerances in the electronic components used. The button will stay lit while the calibration is taking place and will dim after it is complete. If you ever factory reset your device, the calibration will be lost.

Factory Reset


This will return all settings to the their default values.

MIDI Monitor

The MIDI Monitor shows you the MIDI data moving through the device, allowing you to see where it originates and where it goes.

Click the ↕ icon to show the MIDI Monitor.

It has a 1000 event history and is scrollable. To function efficiently, messages do not arrive in real-time. They are buffered and sent in packets and can arrive up to 100ms after the actual MIDI event.

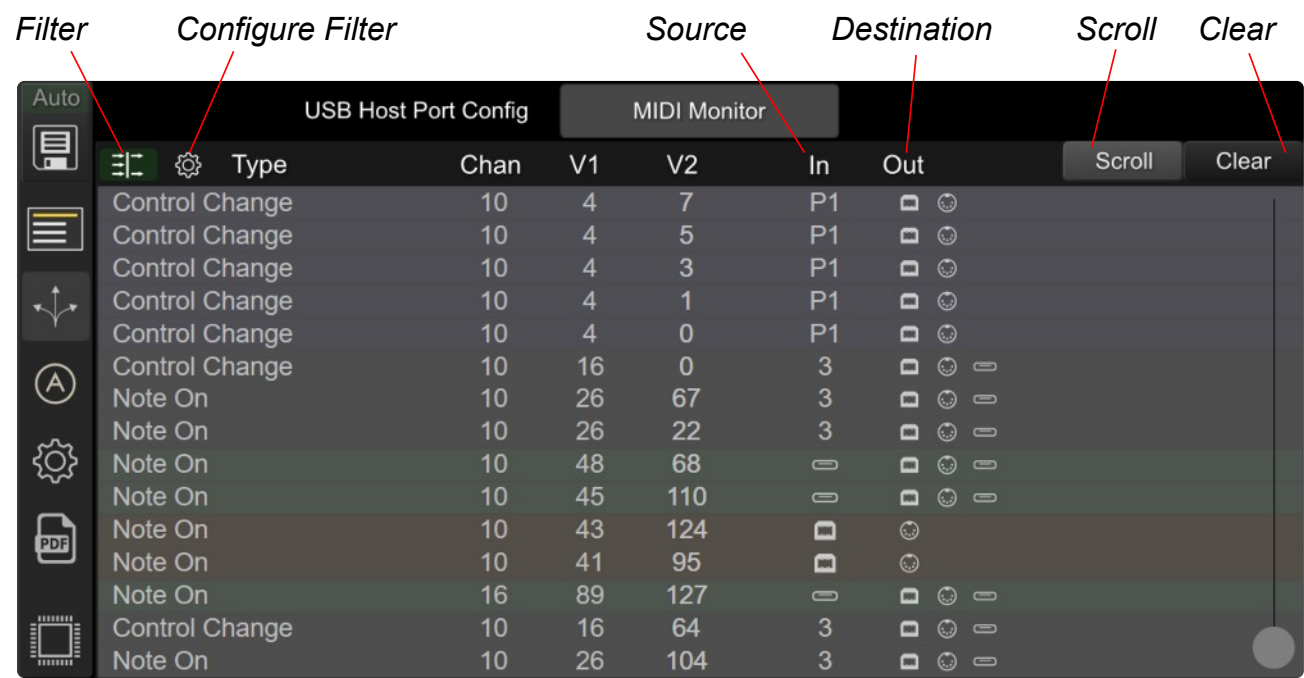

Source and Destinations

This indicates where a MIDI message arrives from and where it goes to. Trigger inputs are labeled 1-12, pedal inputs are P1 or P2, ☐ is device’s USB port, 🎵 is the MIDI DIN, and ☐ is the USB Host port.


The background of events are also color coded by their source. Trigger input messages are grey, pedal input messages are bluish grey, USB host port messages are green, USB MIDI messages are orange, and DIN MIDI messages are purple.

Scroll

When you use your mouse wheel to scroll though the events in the monitor, this button gets deactivated to prevent newly arriving events from changing the current position in the log. Click this button to resume auto-scrolling when new events arrive.

Filter

When on, this visually filters out Active Sensing, MIDI Clock, and Note off messages by default. Click the ⚙ icon to configure the messages it filters.

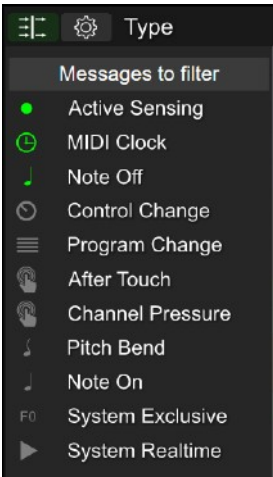

eDRUMin USB Host Port and MIDI Ports



USB host port

The eDRUMin 8, 10, and 12 come with a USB host port for connecting additional eDRUMin devices and/or USB MIDI devices. The host eDRUMin and any devices connected to it function as an aggregate device, complete with crosstalk cancellation between devices.

You can connect a single device or a USB hub, allowing you to connect up to four additional devices. The USB Host port only supplies up to 500mA of power. If you are using a hub and require more than 500mA, be sure to use a powered hub.




Supports 4 port Hubs

The Flow of MIDI Messages


By default, MIDI generated by each device is forwarded to all the other connected devices.

Imagine that we have an eDRUMin 10 connected to a computer via USB. Additionally we have an eDRUMin 4 and a Yamaha drum module connected via a USB hub to the eDRUMin 10 USB host port.

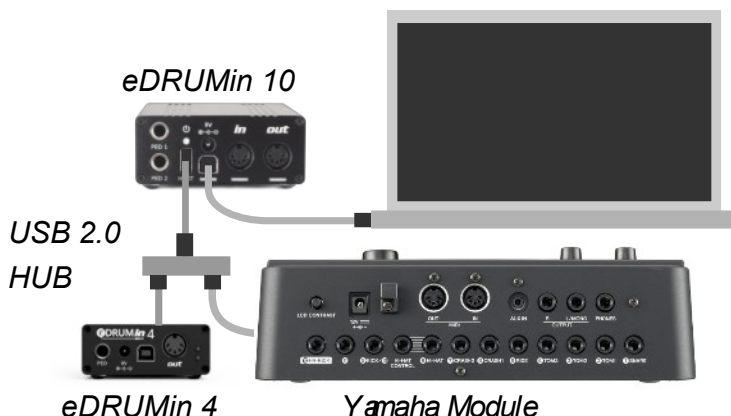

The following statements describe what happens to the MIDI.

1. The MIDI from the eDRUMin 10, the eDRUMin 4, and the Roland module are processed by the eDRUMin 10.
2. Crosstalk cancellation is applied to the MIDI to ensure unintentionally triggered MIDI notes are filtered out.
3. The filtered MIDI from each device is then forwarded on to each of the other connected devices.

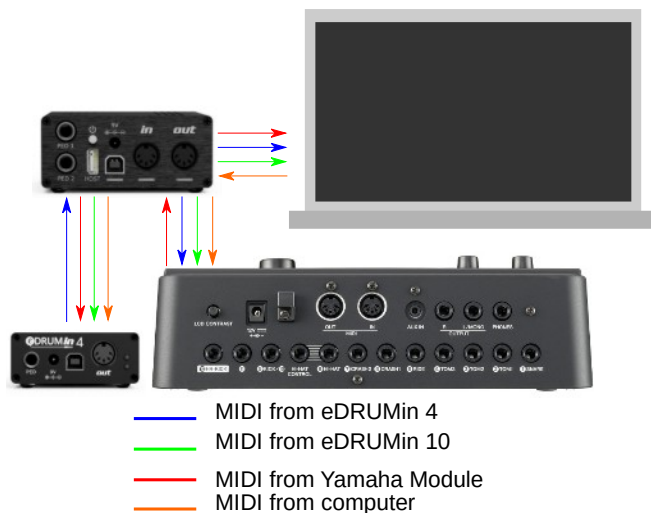


This behavior allows the eDRUMin 10, eDRUMin 4, and the Yamaha module to act as one aggregate device with respect to the computer. At the same time, the eDRUMin 10 and eDRUMin 4 can simultaneously trigger sounds on the Yamaha module.

If connecting a Roland drum module with Local Control disabled, see the next page to ensure that the MIDI it generates is sent back to itself.


Processing External MIDI

This page allows you to adjust crosstalk cancellation for external sources of MIDI and adjust MIDI routing settings for individual sources.

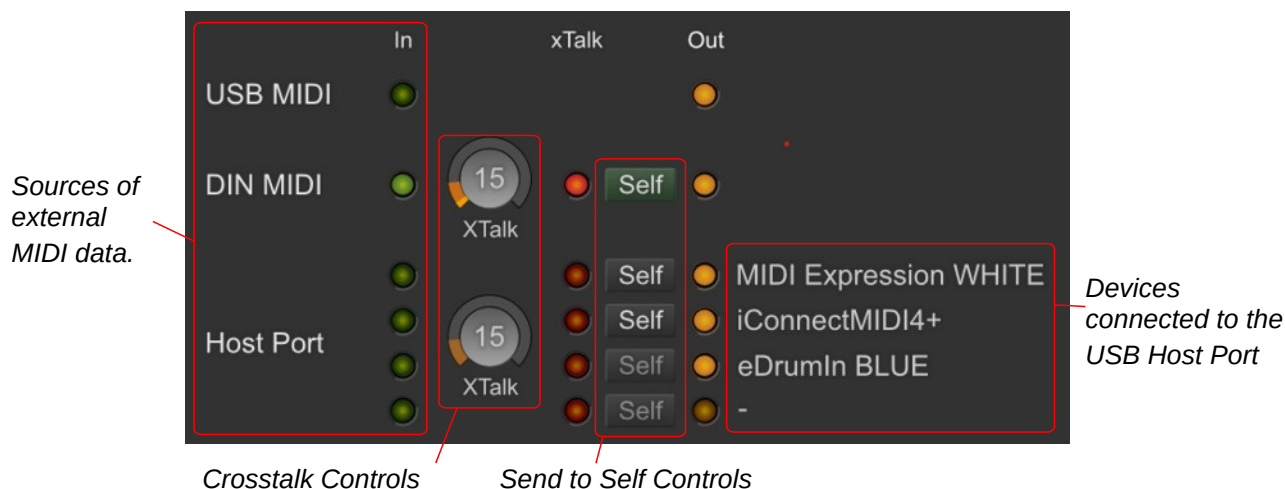

Crosstalk Cancellation

When pads connected to a common structure are processed by separate devices, crosstalk can be an issue. The tom pad in the image on the right is connected to an input of an eDRUMin 10 and the cymbal is connected to an eDRUMin 4, which is connected to the ED10 via the MIDI DIN IN port. When the tom pad is hit, the ED4 also triggers a note because the two pads share a common structure.

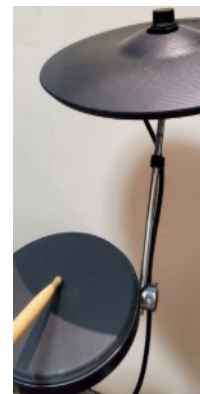

Indicated MIDI note was filtered.

This crosstalk can be filtered out using the crosstalk cancellation controls.



Amount of crosstalk cancellation needed to filter note

When we hit the tom pad, the MIDI DIN In LED lights indicating MIDI activity from the ED4. The meter in the xTalk control lights up indicating that the ED10 detected crosstalk. Because the xTalk control is set higher than the measured crosstalk, the Note On/Off messages are filtered and the red led lights up.

 
In this example, we can see that we can safely reduce the crosstalk control substantially. Typically pads connected to separate devices are physically isolated, so xTalk can be turned all the way down.

Self Send To Self


By default, when a device connected the eDRUMin generates MIDI data, that data is sent to all other connected devices, but it is not back to itself. This is done to prevent the possibility of creating MIDI feedback loops. In some circumstances you might want the MIDI to be returned to the source. If, for example, you are using a Roland module and have "Local Control" disabled, you will need to send the MIDI back to the source in able to hear the sounds back on your module. Enable the 'self' button for a MIDI source to have its crosstalk processed MIDI sent back to it.

Updating Firmware

The *eDRUMin* firmware is periodically updated to add new features or fix bugs. The latest firmware for *eDRUMin* is always included with the *eDRUMin* Control application.



The firmware can be updated or changed by clicking on the Firmware Update icon located at the bottom of the sidebar. Please note that the iOS version of the Control Application does not support updating device firmware.

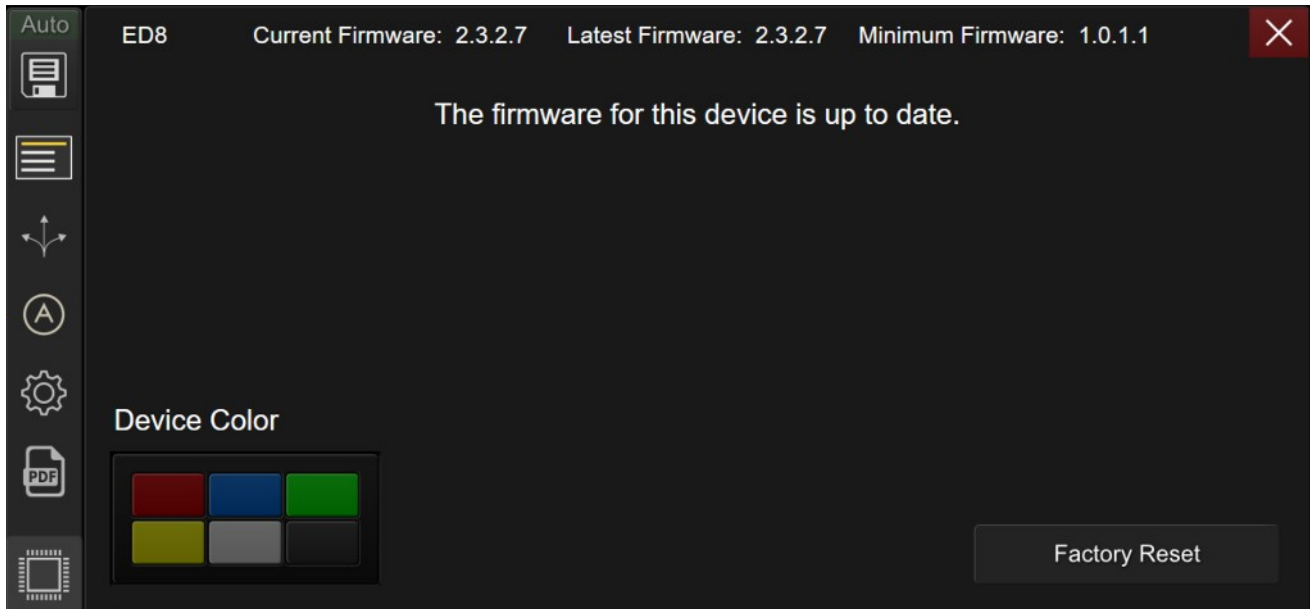

Changing Colors

If you have more than one *eDRUMin* of the same color connected to the same computer, you might want to change the 'color' of one of the devices in order to change the name of its MIDI port to prevent your host sequencer and yourself from getting the devices mixed up.

Factory Reset

The wipes the device's memory and resets all settings to default.

iOS Control Application


The control application is available as an iOS app from the Apple App Store.

Getting Connected

If your iOS device has a USB-C port, then you can connect an *eDRUMin* to it directly using a USB-C to USB-B cable. For iOS devices with a lightning port, you can connect the *eDRUMin* to your device using the Apple Camera Connection kit.

You may also be able to use an iOS device to wirelessly control an *eDRUMin* device that's connected to your mac using Network MIDI. Unfortunately Apple often breaks Network MIDI, so it may not work properly on some versions or macOS.

When the Control Application is opened, any connected devices will automatically be detected. You can manually re-sync devices by clicking on the refresh icon.

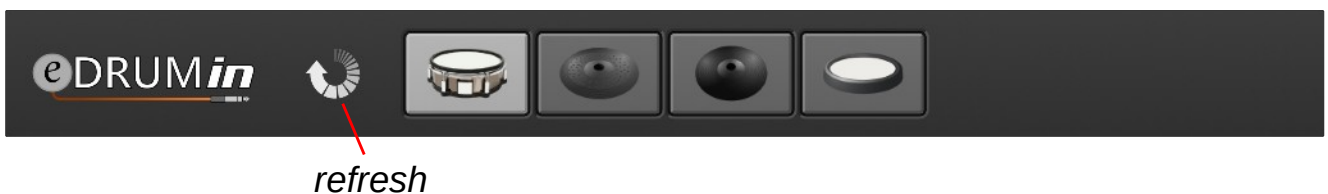



Network MIDI

You may be able to use an iOS device to remotely control an *eDRUMin* devices connected to a computer on your local network. In order for this work work, you will need to connect the two using a MIDI Network.

This is done using the Audio MIDI Setup




Open the Audio MIDI Setup, found in Utilities.

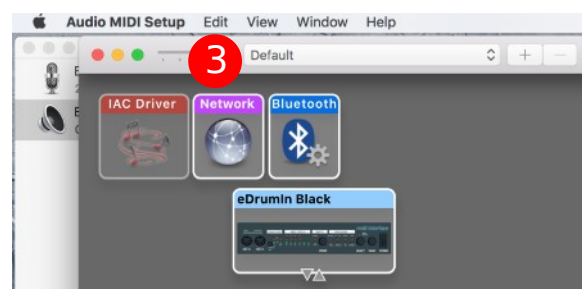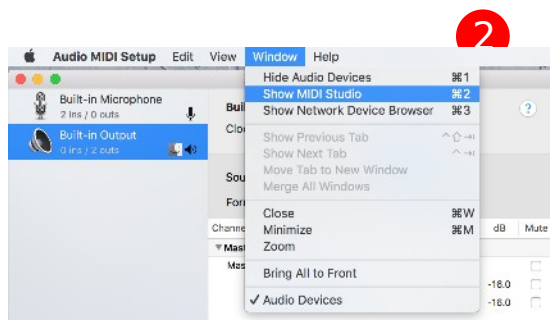

2. From the "Window" menu, select "Show MIDI Window".

3. Double click on the "Network" object.

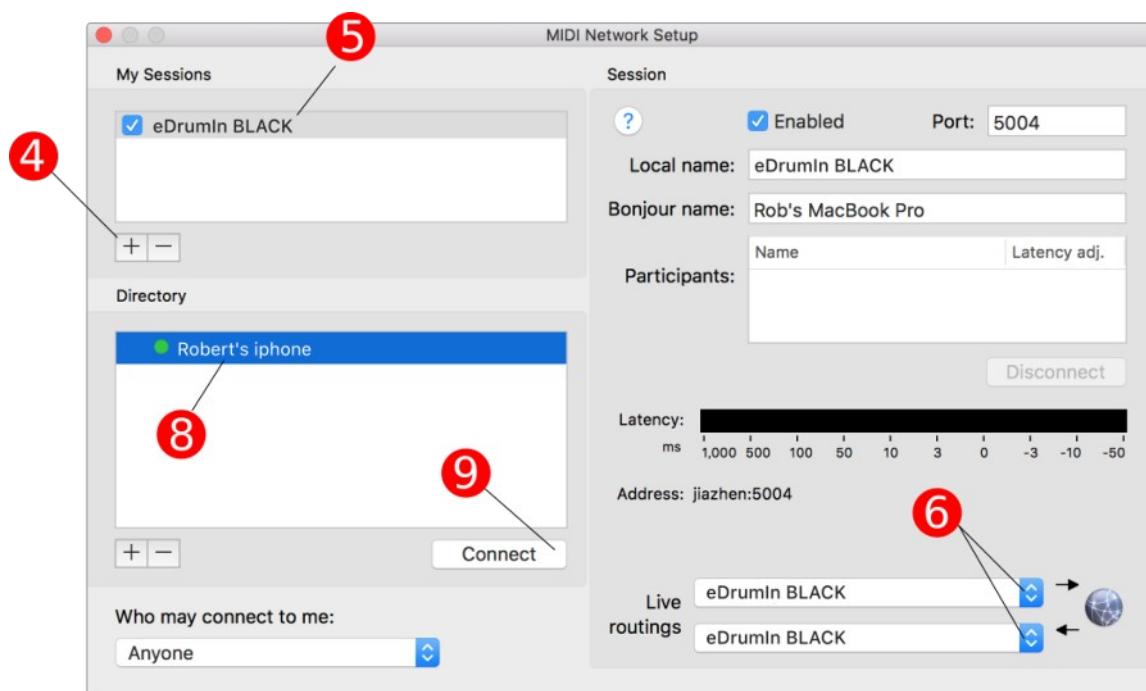

4. Click on the + sign to create a new session.
5. Give it a meaningful name and check the checkbox to enable it.
6. Setup the Live Routings. Be careful to pick the right MIDI Inputs. Do not chose the 'Network' MIDI connections.
7. Open the Control Application on your iOS device.
8. Select your iPhone or iPad.
9. Click on the Connect button.


The Control Application should automatically find and connect to your *eDRUMin*. You'll need to create and connect to a different session for each *eDRUMin* you want to connect to over the network.

About Power in iOS

iOS powers down USB devices when it goes to sleep. If you would like to keep your *eDRUMin* powered and running, you can enabled the 'Keep Device Powered' from the [Setting Panel](#).

This will keep the iOS device awake and the *eDRUMin* powered as long the *eDRUMin* is actively being used. If no activity is detected for 1 minute, the iOS sleep function is re-enabled and the device will go to sleep as normal.

You can also chose to power the device with an external 9V power adapter while connected to iOS. This keeps the device powered and functional even after the iOS device goes to sleep.

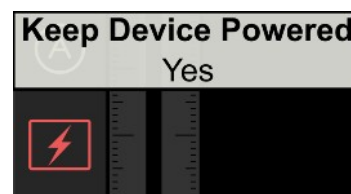

Appendix

Working With Multiple Devices on Separate USB Ports

You can connect as many eDRUMin devices to the same computer as you have USB connections. Each eDRUMin 4 needs about 70mA and each eDRUMin 10 needs about 100mA, so you should be fine using a standard unpowered 4 port USB hub. Updating the firmware while connected though a hub is not recommended.

Managing Crosstalk Between Devices

Because multiple eDRUMin devices connected to separate USB port don't have any direct connection, crosstalk issues can occur when two adjacent pads, connected to the same mounting structure, are connected to separate eDRUMin devices.

There are two ways to avoid crosstalk problems. One way involves physical isolation of pads and cymbals, and the other involves routing MIDI from one device into the other.

Physical Isolation

Any pads connected to a common structure will experience crosstalk and so should be connected to a single eDRUMin so that the device can prevent this crosstalk from causing mistriggers. Pads and cymbals that use separate stands will not experience any crosstalk and therefore can be connected to a second unit without causing any mistriggering.

Crosstalk Cancellation via USB MIDI In



In some situations, physical isolation is not possible. In these cases, the only option for processing crosstalk between devices is to route MIDI from each device into each other device.

Because this method involves complicated MIDI routing, the only support I offer is a screenshot of the routing in Ableton Live. How this is accomplished in various hosts differs, but the general concept is the same.

The first track is the MIDI from both eDRUMin devices, which is sent to Superior Drummer.

The second track routes MIDI from the BLACK eDRUMin to the BLUE eDRUMin.

The last track routes MIDI from the BLUE eDRUMin to the BLACK eDRUMin.

There's no need to record the MIDI used for crosstalk processing, but the tracks do need to have monitoring enabled.

Controlling Banks with MIDI Program Change Messages

A connected sustain pedal or dual footswitch is perfect for controlling banks of notes. If your pedal input is being used by a hihat controller, you can still configure a 3rd party MIDI device to send program changes into the eDRUMin via its USB port.

The MIDI channel of the program change message determines which input should change its bank. The value of the program change says how the bank should change.

Use MIDI Channel to Target Input

Banks Changes can be sent any individual input, the selected input, or all the inputs. The MIDI channel of the program change message determines which input it is sent to.

Input(s)	MIDI Channel
1 - 4 (ED4)	1 - 4
1 - 8 (ED8)	1 - 8
1 - 10 (ED10)	1 - 10
Selected	15
All	16

The 'Selected' input is typically the last active input. If you hit a pad connected to input 1, then input 1 becomes the selected input. If you then hit a pad on input 3, input 3 becomes the selected input.

Use Program Change Value to Specify Operation

The value of the Program Change message determines what it will do. It can select a specific bank, or increment / decrement a bank.

	Dual Zone Inputs, Mono Inputs, Left Bank of Dual Mono Input	Right Bank of Dual Mono Input
Select Bank 1	1	7
Select Bank 2	2	8
Select Bank 3	3	9
Select Bank 4	4	10
Decrement Bank	5	11
Increment Bank	6	12



Note: Inputs that are setup as Dual Mono have two sets of banks associated with them—one for each pad. To target the banks for left half of the input, use the first set of operations. To target the banks for the right half of the input, use the second set of operations.

Setting up your Hihat on its Stand


To get the best performance possible from your hihat, it's important that it's setup properly on its stand. You know your setup is good when every slight movement of your hihat pedal registers in the Control Application. I'm going to go over setting up a Roland VH-10 as an example.

Adjusting the hihat clutch

Setting the height of your hihat correctly is very important for eliminating crosstalk between the hihat pedal and the hihat cymbal. If you set the hihat too high, the sensor on your hihat controller will not be able to detect when you very slightly press down on your hihat pedal. For optimum performance, the hihat cymbal should always be in contact with the plunger on the VH-10 controller.

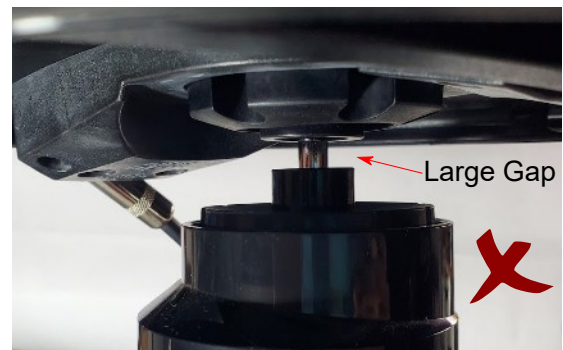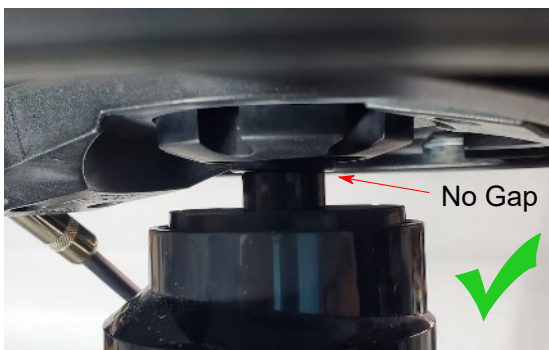

Adjust the knob at the top of the cymbal

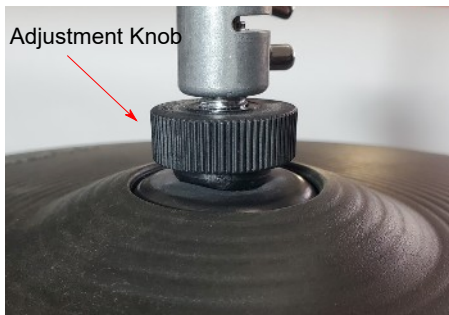

This knob allows you to adjust how much pressure is required to have to pedal register completely closed. Turning clockwise makes it more pressure sensitive and turning it anti-clockwise makes it less pressure sensitive.

For optimal performance with eDRUMin devices, turn the knob almost as much as it can go in the clockwise direction.

This allows the eDRUMin to more accurately track the position of the pedal, and also makes your hihat responsive to the amount of pressure you're applying when in the fully closed position.

Calibrating

After the hihat is setup properly on its stand, the next step is to calibrate it within the control application. Simply press the calibration button and press all the way down on your pedal, as hard as you would normally expect to have to press it. Make any final adjustments with the mouse. Make sure the red position indicator is even or further to the right of the green calibration rectangle when you foot is removed from the pedal.



Tips For Working with Audiofront Controls

The page contains some bits of information that can improve your workflow when using Audiofront software.

General Tips

- Use SHIFT modifiers for more precision.
- Use the mouse wheel for fine adjustments.
- Double-click to set defaults.

Working with Note Controls



The values of these controls can be changed in a variety of ways.

- Drag the value up and down.
- Use the increment or decrement arrows.
- Double-click a control and enter the value as a note name 'C3' or as a note number '60'.

You can switch between displaying note numbers and note names by right clicking a note control (long press to touch devices). This will cause all note controls to change and the setting is saved and restored the next time you open the control application.

For controls that represent musical notes, the device will audition the notes as they are changed, allowing you to setup and test note assignments without any pads connected.

Troubleshooting

If this section doesn't cover your issue, consider checking the [troubleshooting](#) and [technical support](#) users forums for more help and information.

If you are having MIDI related problems, the built-in [MIDI Monitor](#) can help you track down MIDI and routing related issues.

Common Problems

Compatibility issue



 
If you see an orange exclamation mark appear next to an input, it means that the eDRUMin has detected a piezo when it expects a switch and that you most likely have selected the wrong [pad type](#) for the pad that is plugged in.

This could also be the result of a jack not being plugged in all the way, a damaged cable, or a damaged or pinched cymbal membrane switch.

These issues are most common with DIY and metal cymbals.

If using a metal cymbal, make sure it is configured correctly. For example, you might get a compatibility issue your cymbal is set to 'Bell is Switch' when your cymbal actually uses a piezo for the bell.

Although not recommended, you can disable the compatibility check from the [Settings Panel](#).



Hihat Problems

eDRUMin supports so many different hihat technologies, but it can sometimes have trouble auto-detecting different hihat setups, especially for users using non-standard setups.

You can eliminate some possible sources of problems by disabling pedal sensing and specifying the polarity of your hihat pedal / controller.



USB Flash Memory Problems


USB flash drives require a lot of power. If your eDRUMin is unable to read from the flash drive, it is likely due to a power issue. If you have a USB hub connected to your eDRUMin host port with multiple devices connected to the hub, you will need to ensure your setup has enough power. Here are some suggestions:




1. Power the eDRUMin via an external power adapter.
2. Connect the eDRUMin to a powered USB hub using a very short USB cable.
3. Connect a powered USB hub to your eDRUMin host port.

Drum Pad Wiring Diagrams


Dual Piezo Pad
(Roland Style)

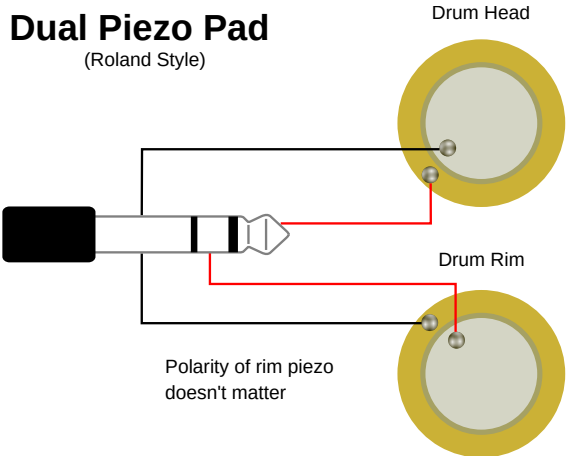


Dual Piezo Pad
(Yamaha Style)

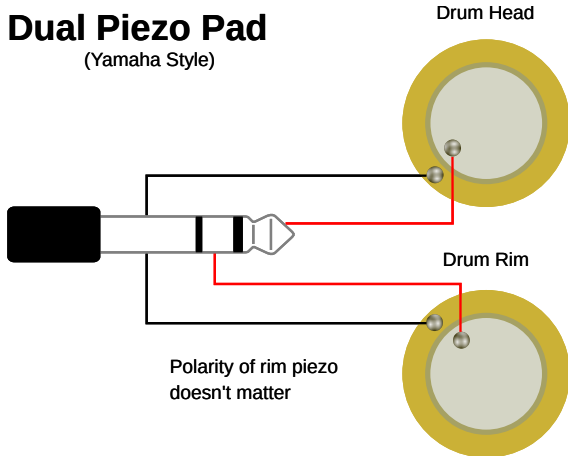


Piezo / Switch Pad
(Roland Style)

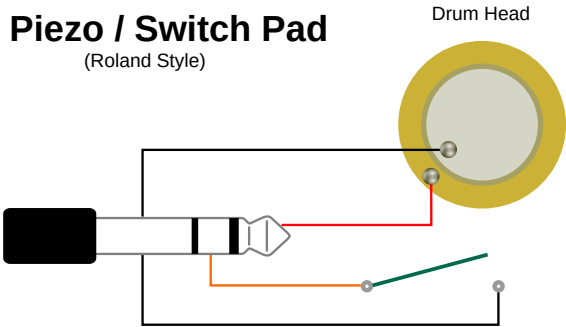


Piezo / Switch Pad
(Yamaha Style)

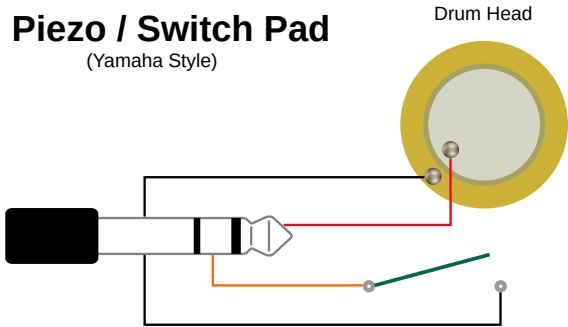


Roland 3-Zone Ride Bell Input

 


Metal 3-Zone Ride Bell Input

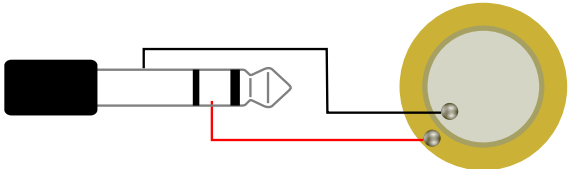

Yamaha 3-Zone Cymbal

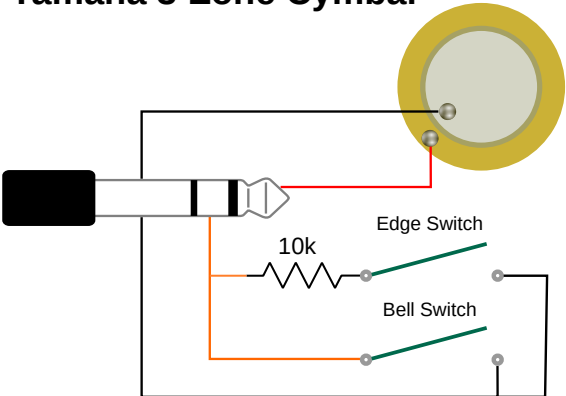


Yamaha 3-Zone Pad

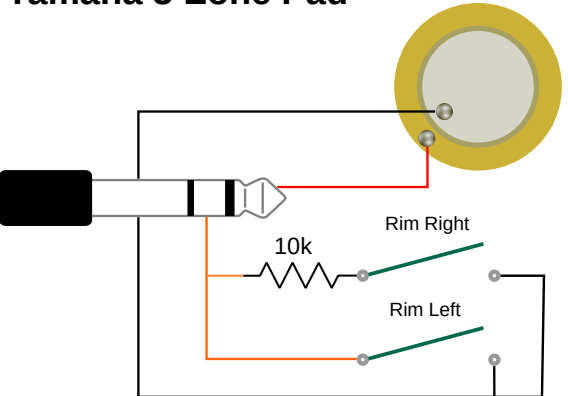

Pedal Input Wiring Diagrams


Expression Pedal

(straight polarity)

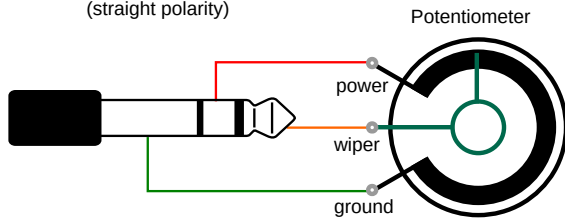


Expression Pedal


(reversed polarity)

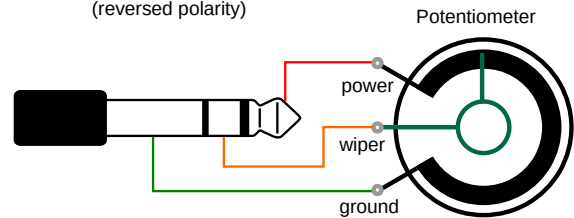


Sustain Pedal

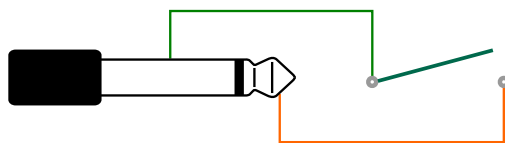


Dual Footswitch

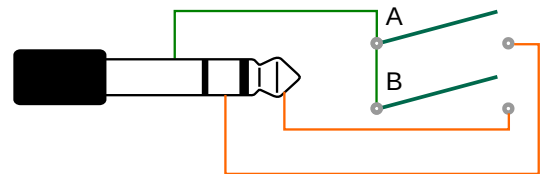

FSR Hi-hat Controller

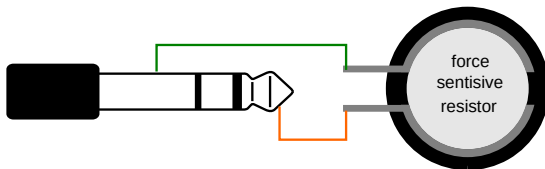


Hall Sensor Hi-hat Controller

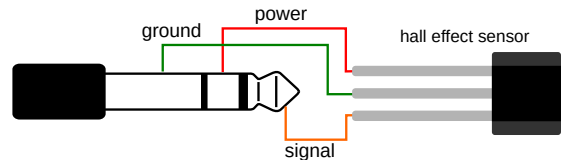

If supplying power externally, do not connect the ring.
Recommended Hall Effect Sensor: DRV5056A1QLPGM

 Rotary Encoder



Voltage on pedal inputs should be in the range of 0V to 3.3V. If externally powering a pedal input, you risk damaging the pedal input if the voltage goes outside of this range.

MIDI Implementation

MIDI Expression MIDI Implementation

Function	Transmit	Respond	Passthru	Remarks
Channel	1 - 16	1 - 16	1 - 16	Learn Note
Notes	0 - 127	0 - 127	0 - 127	Learn Note
Velocity	1 - 127	X	0 - 127	
Aftertouch	X	X	O	
PitchBend	O	X	O	14 bit
Control Change	0 - 127	0 - 127	0 - 127	Parameter Feedback
Program Change	0 - 127	X	0 - 127	
System Exclusive	O	O	O	Control, Display
System Real-Time	X	X	O	
System Common	X	X	O	
RPN / NRPN	X	X	O	

X - Not Used

O - Used

Updated October 4th 2016